 


※Specification

MODEL		EA-BANK960L/C6 EA-BANK960P/C6 EA-BANK960LW/C6 EA-BANK960PW/C6	EA-BANK990L/C6 EA-BANK990P/C6 EA-BANK990LW/C6 EA-BANK990PW/C6	EA-BANK9120L/C6 EA-BANK9120P/C6 EA-BANK9120LW/C6 EA-BANK9120PW/C6	EA-BANK9180L/C6 EA-BANK9180P/C6 EA-BANK9180LW/C6 EA-BANK9180PW/C6
Input voltage (DC)		DC 40V			
Power Consumption		100W	120W	120W	200W
Torque	(kgf.cm)	20.4~61.2	30.6~91.8	40.8~122.4	61.2~183.6
	(Lbf.in)	17.7~53.11	26.55~79.66	35.4~106.21	53.11~159.32
	(N.m)	2~6	3~9	4~12	6~18
Repeatable Torque Accuracy (%)		±5%			
Torque Adjustment		Stepless			
Unloaded Rotation Speed (r.p.m.)±10%	HI	1200	900	550	370
	LO	900	680	410	280
Screw Size Dia.	Machine screw(mm)	4.0~5.0	5.0~6.0	≤8	≤10
	Tapping screw(mm)	≤4	≤4.5	≤6	≤8
Weight (g)		1250			
Length (mm)		315			
Model of Auxiliary Arm		EAA-AUX, EAA-AUXA			
Model of Side Handle Ass'y		EPCF85002			
Power supply		SP-B40HL801T/C6 or SP-BC40HL801T/C6			
Torque Display System		EAA-CTDS			
Bit Type					

※EA-BANK960~9250 Must Be Collaborate With Auxiliary Arm (EAA-AUX, EAA-AUXA)

*Accessories

1. BIT Type:


- No. 00 . . . Bit use in dia 1.3~1.8mm screw
- No. 0 Bit use in dia 1.6~2.0mm screw
- No. 1 Bit use in dia 2.0~2.6mm screw
- No. 2 Bit use in dia 3.0~4.0mm screw

EA-BANK960L/C6, EA-BANK960P/C6
EA-BANK960LW/C6, EA-BANK960PW/C6
EA-BANK990L/C6, EA-BANK990P/C6
EA-BANK990LW/C6, EA-BANK990PW/C6
EA-BANK9120L/C6, EA-BANK9120P/C6
EA-BANK9120LW/C6, EA-BANK9120PW/C6
EA-BANK9180L/C6, EA-BANK9180P/C6
EA-BANK9180LW/C6, EA-BANK9180PW/C6

with BIT 3# 2Pce
with Socket 3# 1Pce
with BIT 3# 2Pce
with Socket 3# 1Pce
with BIT 3# 2Pce
with Socket 3# 1Pce
with BIT 3# 2Pce
with Socket 3# 1Pce

2. Suspension rack and Torque fixing ring acceptable for use with the tool are available from **SUMAKE** catalogue.

※Specification

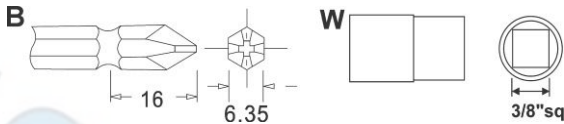MODEL		EA-BANK9120LH/C6 EA-BANK9120PH/C6 EA-BANK9120LHW/C6 EA-BANK9120PHW/C6	EA-BANK9180LH/C6 EA-BANK9180PH/C6 EA-BANK9180LHW/C6 EA-BANK9180PHW/C6	EA-BANK9250L/C6 EA-BANK9250P/C6 EA-BANK9250LW/C6 EA-BANK9250PW/C6	EA-BANK9250LH/C6 EA-BANK9250PH/C6 EA-BANK9250LHW/C6 EA-BANK9250PHW/C6
Input voltage (DC)		DC 40V			
Power Consumption		120W	150W	150W	150W
Torque	(kgf.cm)	40.8~122.4	61.2~183.6	81.6~255	81.6~255
	(Lbf.in)	35.4~106.21	53.11~159.32	70.81~221.28	70.81~221.28
	(N.m)	4~12	6~18	8~25	8~25
Repeatable Torque Accuracy (%)		±5%			
Torque Adjustment		Stepless			
Unloaded Rotation Speed (r.p.m.) ±10%	HI	880	600	370	550
	LO	660	450	280	410
Screw Size Dia.	Machine screw(mm)	≤8	≤10	≤10	≤10
	Tapping screw(mm)	≤6	≤8	≤8	≤8
Weight (g)		1250			2200
Length (mm)		315			380
Model of Auxiliary Arm		EAA-AUX, EAA-AUXA			
Model of Side Handle Ass'y		EPCF85002			
Power supply		SP-B40HL801T/C6 or SP-BC40HL801T/C6			
Torque Display System		EAA-CTDS			
Model of Suspension Rack		EAA-HD4			
Bit Type					

*Accessories



1. BIT Type:

No. 00 . . . Bit use in dia 1.3~1.8mm screw
 No. 0 Bit use in dia 1.6~2.0mm screw
 No. 1 Bit use in dia 2.0~2.6mm screw
 No. 2 Bit use in dia 3.0~4.0mm screw
 EA-BANK9120LH/C6, EA-BANK9120PH/C6
 EA-BANK9120LHW/C6, EA-BANK9120LHW/C6
 EA-BANK9180LH/C6, EA-BANK9180PH/C6
 EA-BANK9180LHW/C6, EA-BANK9180LHW/C6
 EA-BANK9250L/C6, EA-BANK9250P/C6
 EA-BANK9250LW/C6, EA-BANK9250PW/C6
 EA-BANK9250LH/C6, EA-BANK9250PH/C6
 EA-BANK9250LHW/C6, EA-BANK9250PHW/C6

with BIT 3# 2Pce
 with Socket 3# 1Pce
 with BIT 3# 2Pce
 with Socket 3# 1Pce
 with BIT 3# 2Pce
 with Socket 3# 1Pce
 with BIT 3# 2Pce
 with Socket 3# 1Pce

2. Suspension rack and Torque fixing ring acceptable for use with the tool are available from **SUMAKE** catalogue.

 ※Specification

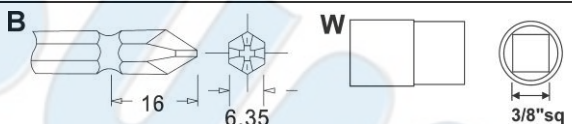MODEL		EA-BANK9350L/C6 EA-BANK9350P/C6 EA-BANK9350LW/C6 EA-BANK9350PW/C6	EA-BANK9500LW/C6 EA-BANK9500PW/C6
Input voltage (DC)		DC 40V	
Power Consumption		150W	150W
Torque	(kgf.cm)	122.4~357	204~510
	(Lbf.in)	106.21~309.8	177~442.56
	(N.m)	12~35	20~50
Repeatable Torque Accuracy (%)		±5%	
Torque Adjustment		Stepless	
Unloaded Rotation Speed (r.p.m.) ±10%	HI	350	230
	LO	260	170
Screw Size Dia.	Machine screw(mm)	≤12	-
	Tapping screw(mm)	≤10	-
Weight (g)		2300	
Length (mm)		384	
Model of Auxiliary Arm		-	
Model of Side Handle Ass'y		-	
Power supply		SP-B40HL801T/C6 or SP-BC40HL801T/C6	
Torque Display System		EAA-CTDS	
Model of Suspension Rack		EAA-HD4	
Bit Type			

3. BIT Type:

No. 00 . . . Bit use in dia 1.3~1.8mm screw

No. 0 Bit use in dia 1.6~2.0mm screw

No. 1 Bit use in dia 2.0~2.6mm screw

No. 2 Bit use in dia 3.0~4.0mm screw

EA-BANK9350L/C6, EA-BAN9350P/C6

EA-BANK9350LW/C6, EA-BAN9350PW/C6

EA-BANK9500LW/C6, EA-BAN9500PW/C6

with BIT 3# 2Pce

with Socket 3# 1Pce


with Socket 3# 1Pce

4. Suspension rack and Torque fixing ring acceptable for use with the tool are available from **SUMAKE** catalogue.

Torque Adjustment Operation

To adjust the torque on these screwdrivers. Proceed as follows :


1. Determine the torque output of the tool by checking a tightened Fastener with a torque wrench.
2. Increase or decrease the torque by rotating the Spring Adjusting Ring. Rotating the Ring clockwise to a higher number on the torque Scale increase torque output while rotating the Ring counterclockwise to a lower number decreases the torque output.
3. Check the adjustment with a torque wrench. A number of factors will affect torque output from one job to another. Final torque adjustment should be made at the job through a of series of gradual increase. Always start below the desired torque and work upward.
4. Adjust the bit torque by changing the driving in length of the adjust ring at the end.
5. The relationship between torque scale and bit torque is as shown Ring, in the torque diagram. The figures of torque scale do not indicate bit torque values. However, the clamping torque of screw itself is different form type, size, material of the screw and the material of its mating part. Use it as standard to obtain an appropriate clamping torque.
6. The (Return torque method) in which once-clamped screw is returned with torque wrench or the like is available as one of torque control methods however, note that the measured values by the return torque method generally appear in 10%~30% lower than the actually clamping torque.
7. The torque checker measures the torque of screwdriver. The clamping torque of screw itself is different from the clamped conditions. Understand the correlation between clamping torque values and the torque checker values perform the torque control properly.

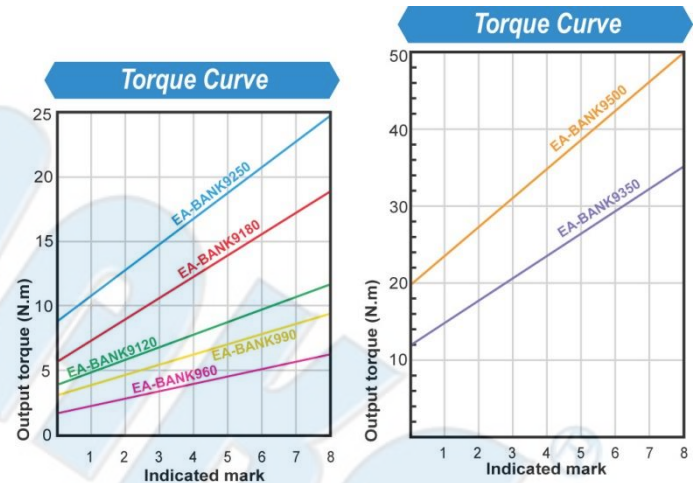

CAUTION

1. Also in reverse rotation, the clutch is turned off in such manner as in normal rotation, stopping the motor running. Accordingly, when the screw tightened at a large torque, set it to a higher torque scale.
2. The number from zero to eight on the Torque Scale are reference number only and not an indication of actual torque output.



Function / Operating Introduction

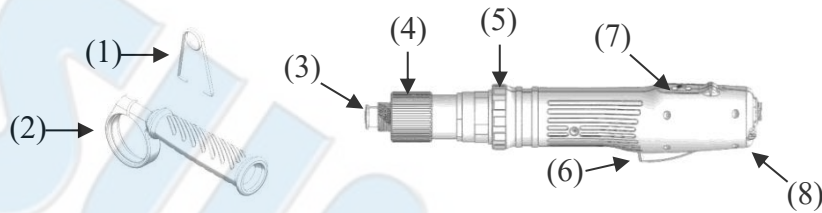

EA-BANK960L(P)/990L(P)/9120L(P)/9180L(P)/9120LH(PH)/9180LH(PH)/9250L(P)

ON	Product Name	Description Use
(1)	Suspension Hook	Convenient Production Lines Able to Hook Hanging Device Balancers Work Together With The Tools to be More Efficiently.
(2)	Side Handle Assy	Auxiliary High Torque Assemble. The Operation Use. (EA-BANK9350/EA-BANK9500 are not attached)
(3)	Bit Sleeve For Hex	Fixed Bit Use.
(4)	Torque Adjusting Ring	Adjust torque Use.
(5)	Coupler	Fixed upside-underside housing and clutch Use.
(6)	Trigger switch	when the trigger switches, the screwdriver starts functioning, it stops when the screw has been tightened up or the trigger has been released.
(7)	F/R Switching Element	Switching Forward / Reverse Use
(8)	Suspension Hook Hole	Loading Suspension Hook Use

- Kindly note that EA-BANK960L(P)/990L(P)/9120L(P)/9180L(P)/9120LH(PH)/9180LH(PH)/9250L(P) will be enclosed with the torque fixing ring.
The torque fixing ring can protect the operator and avoid getting hurt by the threads on the screwdriver.
And it can fix the torque and prevent the torque to be adjusted.
In order to prevent getting hurt, kindly check if the torque fixing ring is fixed when using the screwdriver and adjusting the torque.
- When operating a tool for over 70 kgf.cm application, please make sure to use it with an auxiliary arm to avoid the operator's injury or unexcepted tool performance.
If a user doesn't mount the tool on an auxiliary arm, he/she needs to take the responsibility for any injury or product quality issue caused.
- Clamp fixed position for 3cm Nylon Fixed-Wire
The clamp fixed position for 3cm Nylon Fixed-Wire is at 235mm start count from the top of the screwdriver flat surface (for direct cable), as shown in Figure 1.
The clamp fixed position for 3cm Nylon Fixed-Wire is at 285mm start count from the top of the screwdriver flat surface(for 15 cm tail cable), as shown in Figure 2.
The clamp fixed position for 3cm Nylon Fixed-Wire is at 390mm start count from the top of the screwdriver flat surface (for Iron ring socket type), as shown in Figure 3.

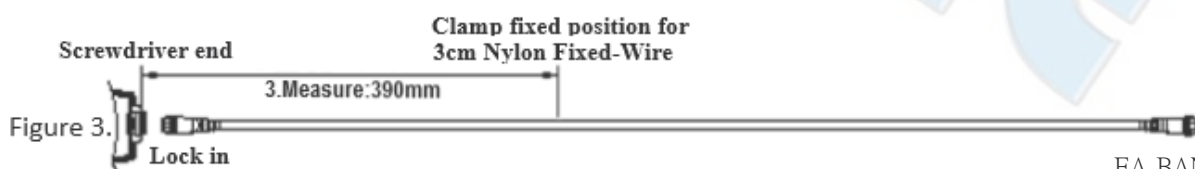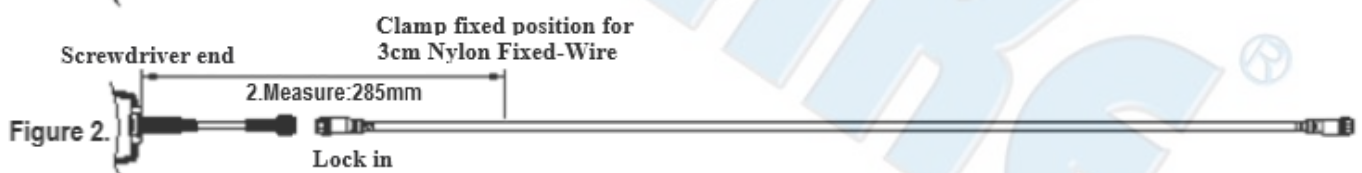

EU Declaration of Conformity (DOC)

We: **SUMAKE INDUSTRIAL CO., LTD.**

4F, No. 351, Yangguang St., Neihu District, Taipei City, Taiwan

declare in sole responsibility that the equipment

Equipment : **ELECTRIC SCREWDRIVER (WRENCH)**

Model/ Serial No. : **EA-BANK960L/C6, EA-BANK990L/C6, EA-BANK9120L/C6,
EA-BANK9180L/C6, EA-BANK9120LH/C6, EA-BANK9180LH/C6,
EA-BANK960P/C6, EA-BANK990P/C6, EA-BANK9120P/C6,
EA-BANK9180P/C6, EA-BANK9120PH/C6, EA-BANK9180PH/C6,
EA-BANK960LW/C6, EA-BANK990LW/C6, EA-BANK9120LW/C6,
EA-BANK9180LW/C6, EA-BANK9120LHW/C6, EA-BANK9180LHW/C6,
EA-BANK960PW/C6, EA-BANK990PW/C6, EA-BANK9120PW/C6,
EA-BANK9180PW/C6, EA-BANK9120PHW/C6, EA-BANK9180PHW/C6**

The object of the declaration described above is in conformity with the relevant union harmonization legislation:

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility 2014/30/EU
- RoHS 2011/65/EU

The following harmonised standards and technical specifications have been applied:

- EN 62841-1:2015/AC:2015
- EN 62841-2-2:2014/AC:2015
- EN 55014-1:2017
- EN 61000-3-2:2014
- EN 61000-3-3:2013
- EN 55014-2:2015

Data:

Noise level:

Sound pressure level: Load: 75.3 dB(A)

Sound power level: Load: 86.3 dB(A)

Vibration level:

No Load: <2.5 m/s²

Name and Signature/Position



Mike Su – Managing Director

Date and Place

2021/2/4

Taipei, Taiwan

EA-BANK(W) SERIES/C6-D-2302G-K2

EU Declaration of Conformity (DOC)

We: **SUMAKE INDUSTRIAL CO., LTD.**

4F, No. 351, Yangguang St., Neihu District, Taipei City, Taiwan

declare in sole responsibility that the equipment

Equipment : **ELECTRIC SCREWDRIVER (WRENCH)**

Model/ Serial No. : **EA-BANK9250L/C6, EA-BANK9250LH/C6, EA-BANK9350L/C6
EA-BANK9250P/C6, EA-BANK9250PH/C6, EA-BANK9350P/C6
EA-BANK9250LW/C6, EA-BANK9250LHW/C6, EA-BANK9350LW/C6,
EA-BANK9500LW/C6, EA-BANK9250PW/C6, EA-BANK9250PHW/C6,
EA-BANK9350PW/C6, EA-BANK9500PW/C6**

The object of the declaration described above is in conformity with the relevant union harmonization legislation:

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility 2014/30/EU
- RoHS 2011/65/EU

The following harmonised standards and technical specifications have been applied:

- EN 60745-2-2:2010
- EN 60745-1:2009/A11:2010
- EN 55014-1:2006+A1:2009+A2:2011
- EN 61000-3-2:2014
- EN 61000-3-3:2013
- EN 55014-2:2015

Data:

Noise level: EN 60745-2

Vibration level: EN ISO 8041

Sound pressure level: Load: 79.1 dB(A)

Sound power level: Load: 90.1 dB(A)

No Load: < 2.5 m/s²

Name and Signature/Position



Mike Su – Managing Director


Date and Place

2017/9/14

Taipei, Taiwan

EA-BANK9250(350)(500)(W) SERIES/C6-D-2302C-K2

EA-BANK960(990)(9120)(9180)(9250)L/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE ELECTRIC SCREWDRIVER (6PIN)
 EA-BANK9120(9180)LH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED ELECTRIC SCREWDRIVER (6PIN)
 EA-BANK960(990)(9120)(9180)(9250)LW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE 3/8" ELECTRIC WRENCH (6PIN)
 EA-BANK9120(9180)LHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED 3/8" ELECTRIC WRENCH (6PIN)

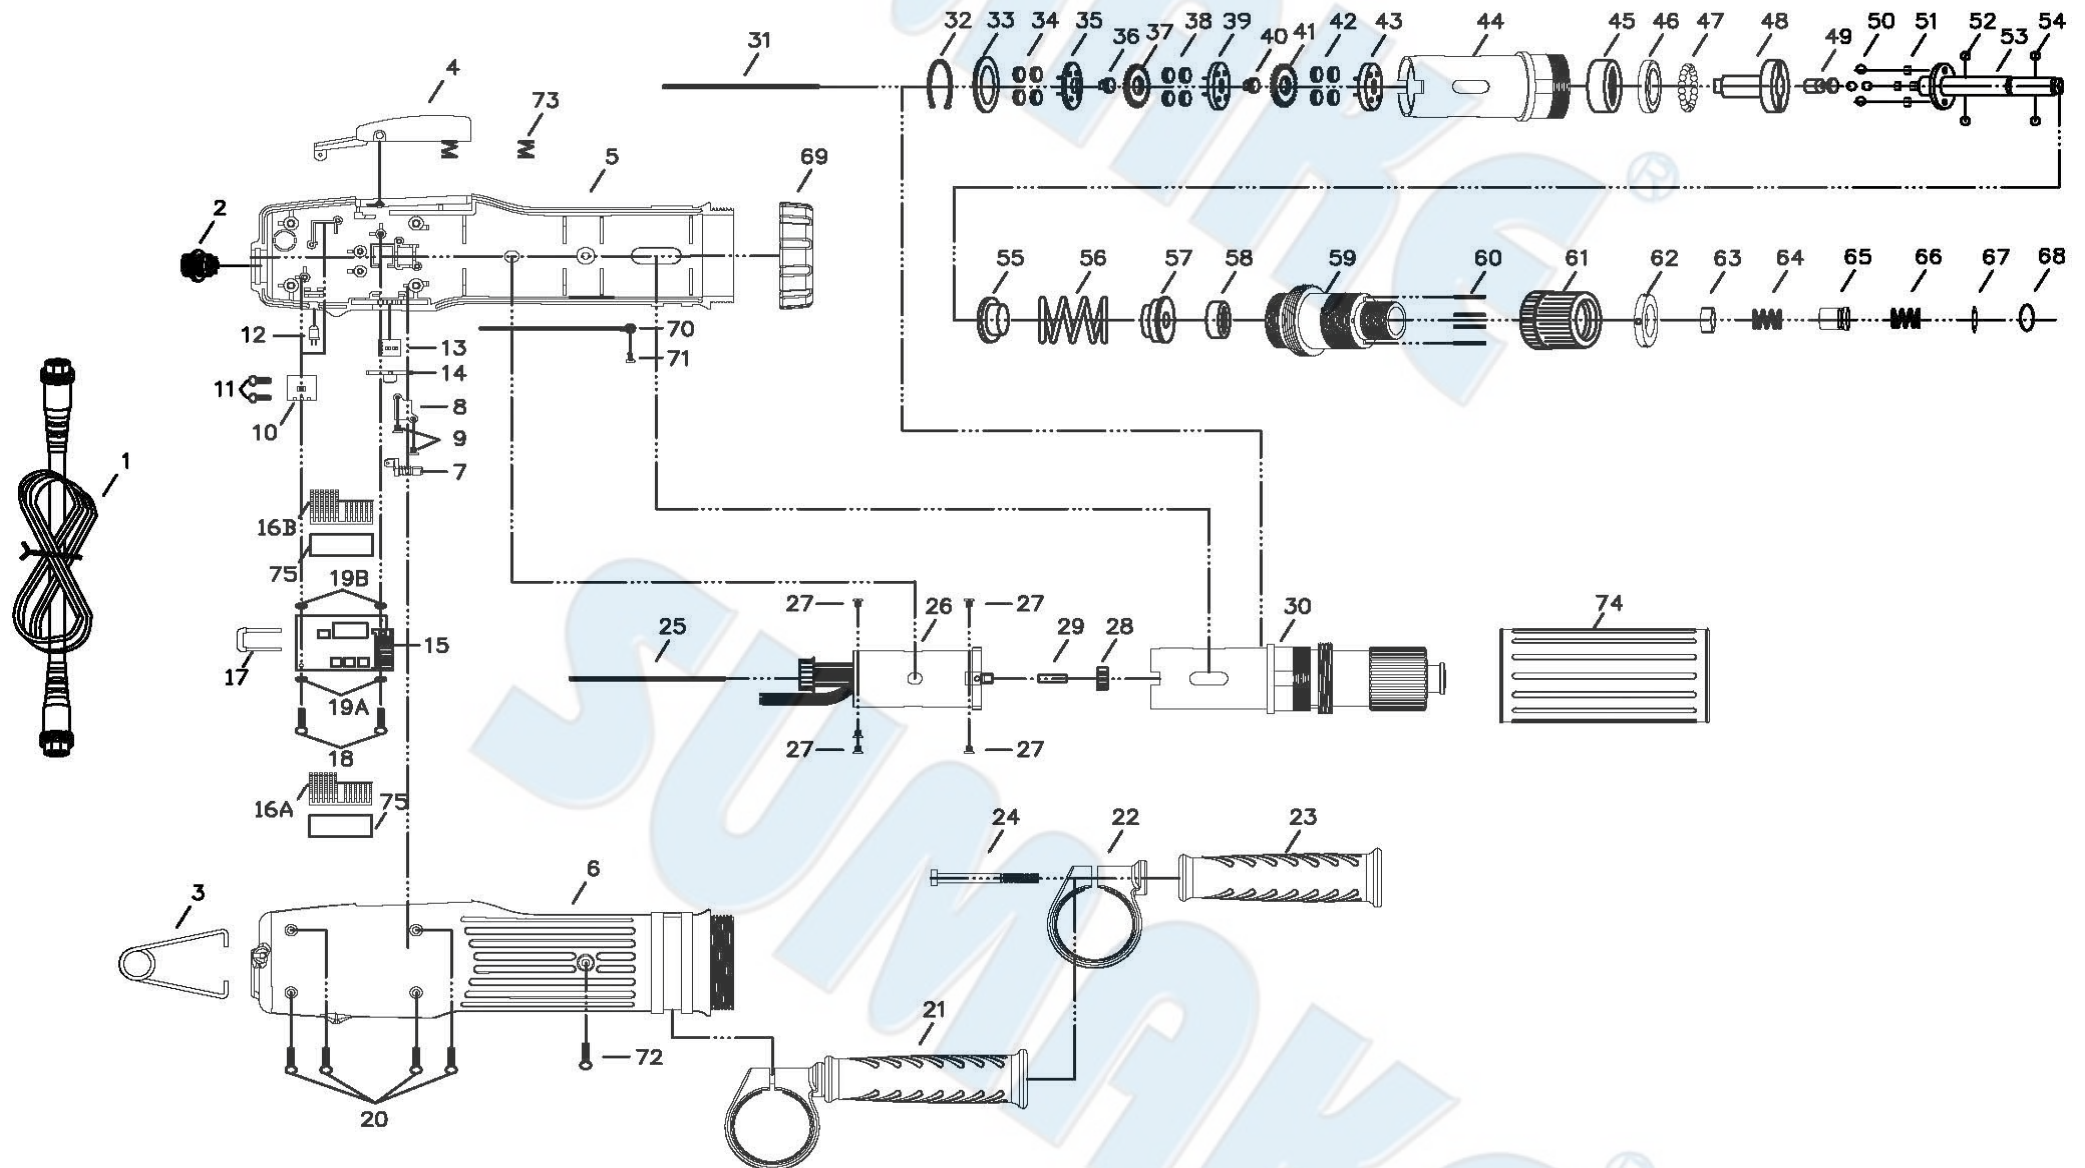


EA-BANK960(990)(9120)(9180)(9250)L/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE ELECTRIC SCREWDRIVER (6PIN)
EA-BANK9120(9180)LH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED ELECTRIC SCREWDRIVER (6PIN)
EA-BANK960(990)(9120)(9180)(9250)LW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE 3/8" ELECTRIC WRENCH (6PIN)
EA-BANK9120(9180)LHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED 3/8" ELECTRIC WRENCH (6PIN)

PARTS LIST

No.	Parts No.	Description	Q'ty
1	EPA50001-139N	Cord Assembly 3m "I/O Signal Control Box" Type	1
2	EPP250190	Connector Assembly	1
3	EPCJ20012-1	Suspension Hook	1
4	EPCC50016	Trigger Assembly	1
	EPCC50016-1	Trigger Assembly (ESD)	1
5	EPC40795F-BC6P	Housing-Underside Assembly	1
	EPC40795-1F-BC6P	Housing-Underside Assembly (ESD)	1
6	EPCA93114	Housing-Upside	1
	EPCA93114-1	Housing-Upside (ESD)	1
7	EPCE50152-7	Push Rod	1
8	EPCE80001	Fuxure	1
9	EPCH30200	Screw For Fuxure	2
10	EPEG31420-16AF	Start Switch P.C.B.	1
11	EPCH30201	Screw For Start P.C.B.	2
12	EPE33105-1	Led	1
13	EPEG31421-15F	Changeover Switch P.C.B.	1
	EPCI50212-6	F/R Switching Element For EA-BANK960L(LW)/C6	1
	EPCI50212-7	F/R Switching Element For EA-BANK990L(LW)/C6	1
14	EPCI50212-9	F/R Switching Element For EA-BANK9120L(LW)/C6, EA-BANK9120LH(LHW)/C6	1
	EPCI50212-11	F/R Switching Element For EA-BANK9180L(LW)/C6, EA-BANK9180LH(LHW)/C6	1
	EPCI50212-10	F/R Switching Element For EA-BANK9250L(LW)/C6	1
15	EPEG31537-2A-2.0	P.C.B. For	1
16A	EPE32204-1	Heat Sink (Up)	1
16B	EPE32204-1	Heat Sink (Down)	1
17	EPW50109-4	Clamp	1
18	EPCH90154	Screw For P.C.B.	2
	EPCH20510	Screw For P.C.B. (ESD)	2
19A	EPP11020-4	Insulating Washer (Up)	2
19B	EPP11020-4	Insulating Washer (ESD) (Down)	2
20	EPCH20102	Screw For Housing	4
21	EPCF85002	Side Handle Assembly	1
22	EPC15002	Clamp-Side Handle	1
23	EPC15001	Handle-Side Handle	1
24	EPCH30195	Screw	1
25	EPMI30511-8	Pilot Rod	1
26	EPMO91506CE	Motor Assembly	1
27	EPCH20102-31	Screw For Motor	5
	EPMI11321	Gear For EA-BANK960L(LW)/C6	1
28	EPMI11320	Gear For EA-BANK990L(LW)/C6, EA-BANK9120LH(LHW)/C6	1
	EPMI11319	Gear For EA-BANK9120L(LW)/C6, EA-BANK9180LH(LHW)/C6	1
	EPMI11318	Gear For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
29	EPMG30081-2	Pilot Rod	1
	EPGZ15006R-3	Clutch Assembly For EA-BANK960L/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15006R-4	Clutch Assembly For EA-BANK960LW/C6	1
	EPGZ15006R-5	Clutch Assembly For EA-BANK960L/C6 Hex 6.35mm-B9.5	1
	EPGZ15009R-3	Clutch Assembly For EA-BANK990L/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15009R-4	Clutch Assembly For EA-BANK990LW/C6	1
	EPGZ15009R-5	Clutch Assembly For EA-BANK990L/C6 Hex 6.35mm-B9.5	1
	EPGZ15012R-3	Clutch Assembly For EA-BANK9120L/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15012R-4	Clutch Assembly For EA-BANK9120LW/C6	1
	EPGZ15012R-5	Clutch Assembly For EA-BANK9120L/C6 Hex 6.35mm-B9.5	1
30	EPGZ15018R-3	Clutch Assembly For EA-BANK9180L/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15018R-4	Clutch Assembly For EA-BANK9180LW/C6	1
	EPGZ15018R-5	Clutch Assembly For EA-BANK9180L/C6 Hex 6.35mm-B9.5	1
	EPGZ15022R	Clutch Assembly For EA-BANK9120LH/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15022R-1	Clutch Assembly For EA-BANK9120LH/C6 Hex 6.35mm-B9.5	1
	EPGZ15022R-2	Clutch Assembly For EA-BANK9120LHW/C6	1
	EPGZ15021R	Clutch Assembly For EA-BANK9180LH/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15021R-1	Clutch Assembly For EA-BANK9180LH/C6 Hex 6.35mm-B9.5	1
	EPGZ15021R-2	Clutch Assembly For EA-BANK9180LHW/C6	1
	EPGZ15019R	Clutch Assembly For EA-BANK9250L/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15019R-1	Clutch Assembly For EA-BANK9250L/C6 Hex 6.35mm-B9.5	1
	EPGZ15019R-2	Clutch Assembly For EA-BANK9250LW/C6	1
31	EPMI30511-7	Pilot Rod	1
32	EPGK20232	"C"Ring	1
33	EPGI28442	Iron Washer	1

No.	Parts No.	Description	Q'ty
	EPGH92235	Idle Gear For EA-BANK960L(W)/C6	3
34	EPGH92234	Idle Gear For EA-BANK990L(W)/C6, EA-BANK9120LH(LHW)/C6	4
	EPGH92233	Idle Gear For EA-BANK9120L(LW)/C6, EA-BANK9180LH(LHW)/C6	3
	EPGH92232	Idle Gear For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	4
	EPGG21512	Gear Seat For EA-BANK960L(W)/C6	1
35	EPGG21511	Gear Seat For EA-BANK990L(W)/C6, EA-BANK9120LH(LHW)/C6	1
	EPGG21510	Gear Seat For EA-BANK9120L(LW)/C6, EA-BANK9180LH(LHW)/C6	1
	EPGG21509	Gear Seat For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
	EPG20109	Central Gear For EA-BANK960L(W)/C6	1
36	EPG20108	Central Gear For EA-BANK990L(W)/C6, EA-BANK9120LH(LHW)/C6	1
	EPG20107	Central Gear For EA-BANK9120L(LW)/C6, EA-BANK9180LH(LHW)/C6	1
	EPG20111	Central Gear For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
37	EPGI28453	Washer For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
38	EPGH92236	Idle Gear For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	4
39	EPGG21513	Gear Seat For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
40	EPG20110	Central Gear For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
41	EPGI28453	Washer	1
	EPGH92235-1	Idle Gear For EA-BANK960L(W)/C6	3
42	EPGH92234-1	Idle Gear For EA-BANK990L(W)/C6, EA-BANK9120LH(LHW)/C6	4
	EPGH92233-1	Idle Gear For EA-BANK9120L(LW)/C6, EA-BANK9180LH(LHW)/C6	3
	EPGH92232-1	Idle Gear For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	4
	EPGG21512-1	Gear Seat For EA-BANK960L(W)/C6	1
43	EPGG21511-1	Gear Seat For EA-BANK990L(W)/C6, EA-BANK9120LH(LHW)/C6	1
	EPGG21510-1	Gear Seat For EA-BANK9120L(LW)/C6, EA-BANK9180LH(LHW)/C6	1
	EPGG21509-1	Gear Seat For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
44	EPGA91286	Gear Case For EA-BANK960L(W)/C6, EA-BANK990L(W)/C6, EA-BANK9120L(W)/C6, EA-BANK9120LH(LHW)/C6, EA-BANK9180LH(LHW)/C6	1
	EPGA91285	Gear Case For EA-BANK9180L(LW)/C6, EA-BANK9250L(LW)/C6	1
45	EPGN30433	Main Bearing	1
46	EPG21427-3	Plate-Clutch	1
47	EPGP30351	Steel Balls (4mm)	18
48	EPGC90303-2	Cam	1
49	EPGU30372	Stop Pilot	1
50	EPGP30381	Steel Balls (6mm)	4
51	EPGP30382	Cushion	4
52	EPGP30381	Steel Balls (6mm)	2
	EPGD91405-1	Shaft For Hex 6.35mm Type (Opt.)	1
53	EPGD91405-2	Shaft For Hex 6.35mm-B9.5 Type	1
	EPGD91403-3	Shaft For Round-Socket	1
54	EPGP30371	Steel Balls 3.15mm For Hex 6.35mm Type	2
55	EPGF90323	Waring Plate	1
	EPGE92383B-1	Waring Spring For EA-BANK960L(W)/C6	1
	EPGE92384	Waring Spring For EA-BANK990L(W)/C6	1
56	EPGE92385-1	Waring Spring For EA-BANK9120L(W)/C6, EA-BANK9120LH(LHW)/C6	1
	EPGE92386-1	Waring Spring For EA-BANK9180L(W)/C6, EA-BANK9180LH(LHW)/C6	1
	EPGE92415	Waring Spring For EA-BANK9250L(W)/C6	1
57	EPGY21322	Waring Spring Base	1
58	EPGN30432	Bearing	1
59	EPG20211	Clutch Case	1
60	EPGL30483	Torque Adjusting Pins	4
61	EPGM30493	Torque Adjusting Ring	1
62	EPGS30503	"C"Ring	1
63	EPG21303	Spacer For Hex 6.35mm Type	1
64	EPGO21342	Bit Spring For Hex 6.35mm Type	2
65	EPGJ30471B	Bit Sleeve For Hex 6.35mm Type	1
66	EPGO21342	Bit Spring For Hex 6.35mm Type	2
67	EPG21436	Washer For "C" Type Hex 6.35mm Type	1
68	EPGO30472	"C"Ring For Hex 6.35mm Type	1
69	EPD91034	Coupler	1
	EPD91034-1	Coupler (ESD)	1
70	EPCH50671-6	Grounding Means	1
71	EPCH20102-11	Screw	1
72	EPCH90149	Screw	2
73	EPCK28031-1	Trigger Spring	1
74	EPPE02003-7	Soft Cover	2
75	EPW50104-7	Gasket	2

EA-BANK9250LH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED ELECTRIC SCREWDRIVER
 EA-BANK9250LHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED 3/8" ELECTRIC WRENCH
 EA-BANK9350L/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE ELECTRIC SCREWDRIVER
 EA-BANK9350LW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE 3/8" ELECTRIC WRENCH
 EA-BANK9500LW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE 1/2" ELECTRIC WRENCH

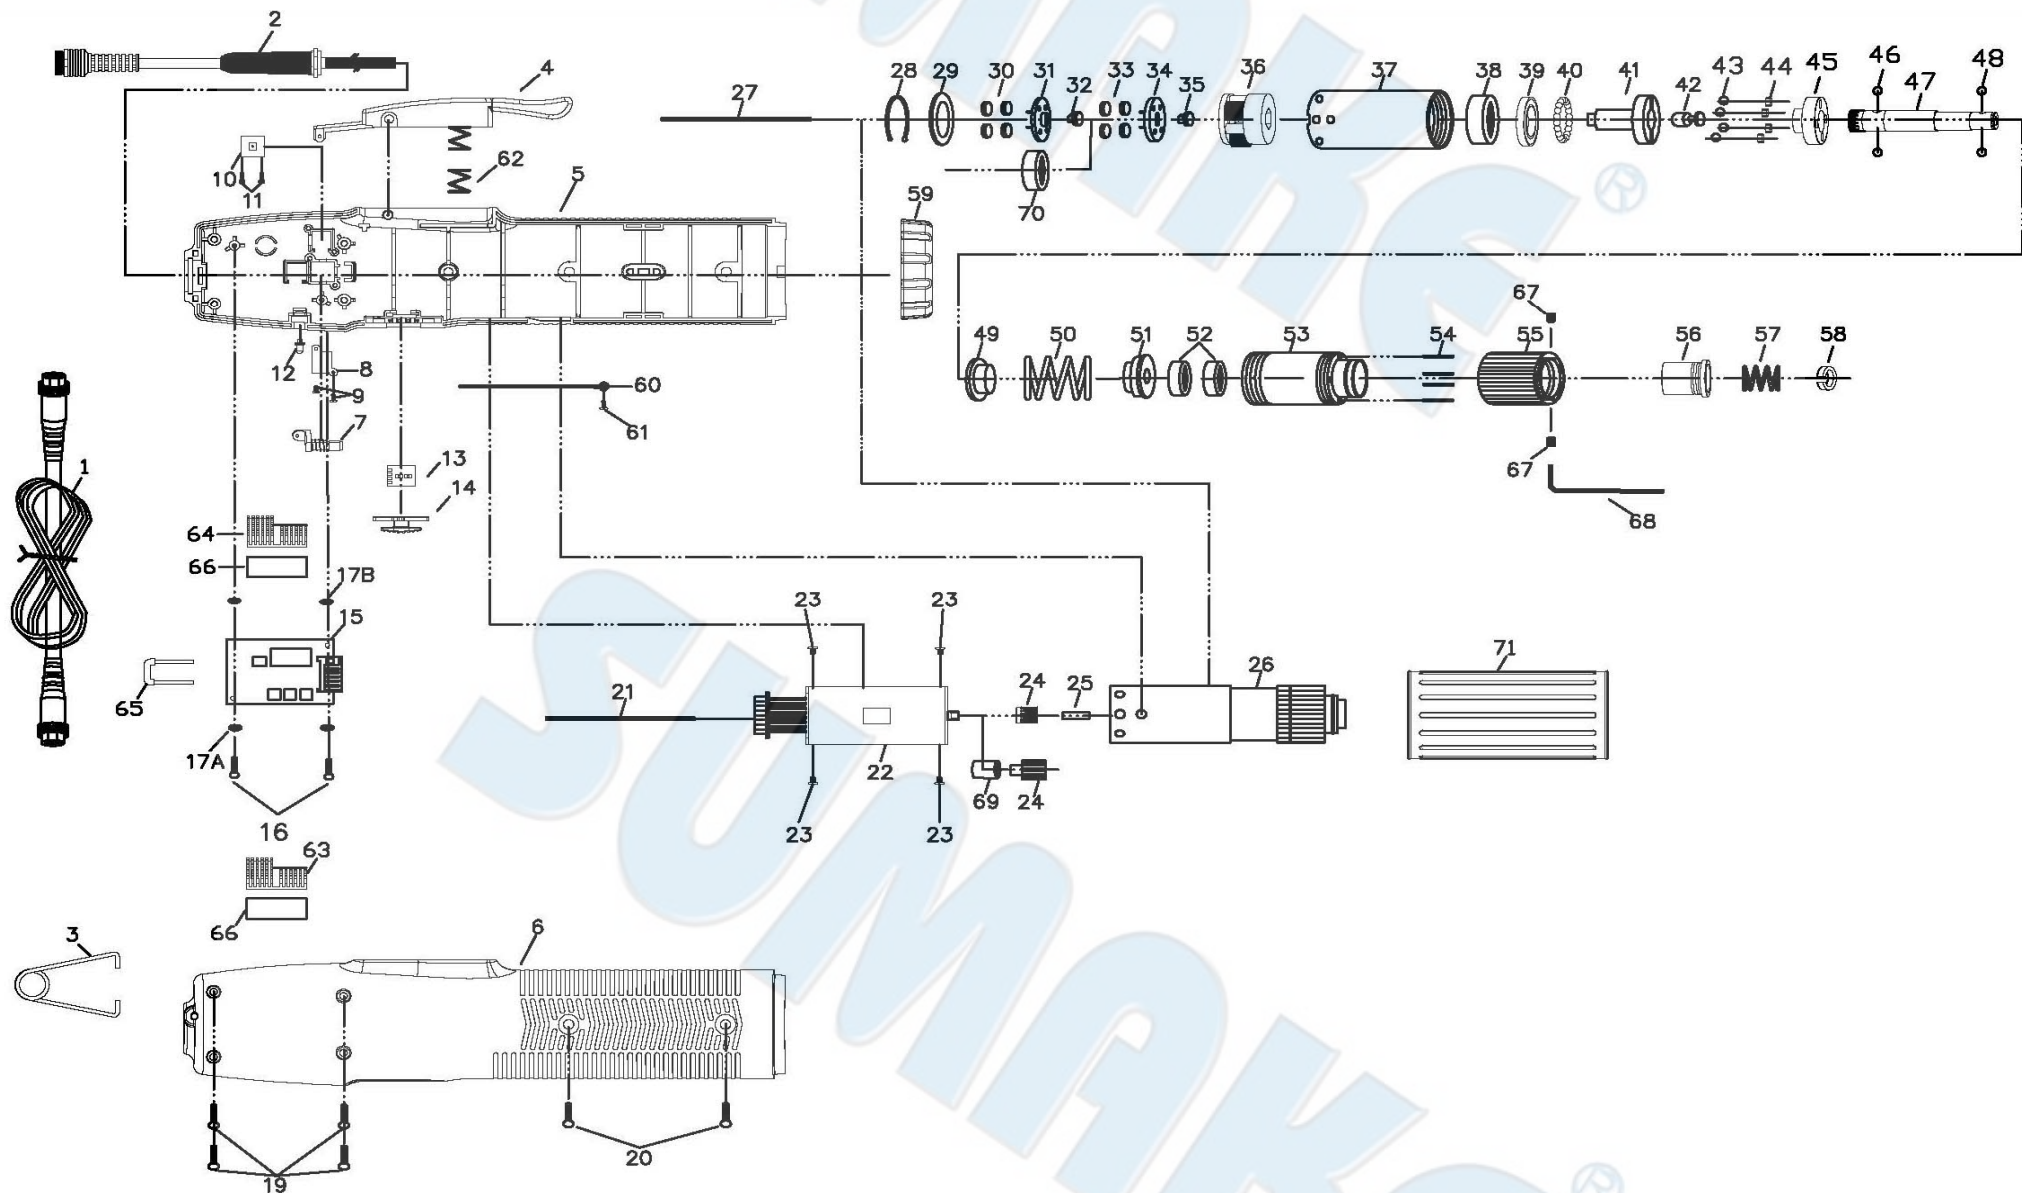


EA-BANK9250LH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED ELECTRIC SCREWDRIVER
EA-BANK9250LHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE HIGH SPEED 3/8" ELECTRIC WREMCH
EA-BANK9350L/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE ELECTRIC SCREWDRIVER
EA-BANK9350LW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE 3/8" ELECTRIC WREMCH
EA-BANK9500LW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, LEVER START TYPE 1/2" ELECTRIC WREMCH

PARTS LIST

No.	Parts No.	Description	Q'ty
1	EPAA50005A-B6P-7N	Cord Assembly 3m "I/O Signal Control Box" Type	1
2	EPAA50006-B6P-4N-T	Cord Assembly	1
3	EPCJ20012-1	Suspension Hook	1
4	EPCC50021F	Trigger Assembly	1
	EPCC50021-1F	Trigger Assembly (ESD)	1
5	EPC40779F-SNBC-6P	Housing-Underside Assembly	1
	EPC40779-1F-SNBC-6P	Housing-Underside Assembly (ESD)	1
6	EPCA93117	Housing-Upside	1
	EPCA93117-1	Housing-Upside (ESD)	1
7	EPCE50155	Push Rod	1
8	EPCE80003	Fuxure	1
9	EPCH30200	Screw For Fuxure	2
10	EPEG31420-16AF	Start Switch P.C.B.	1
11	EPCH30201	Screw For Start P.C.B.	2
12	EPE33105-4	Led	1
13	EPEG31421-15F	Changeover Switch P.C.B.	1
14	EPCI50212-10	F/R Switching Element For EA-BANK9350L(LW)/C6	1
	EPCI50212-8	F/R Switching Element For EA-BANK9500LW/C6	1
15	EPEG31537-3A-2.0	P.C.B. For	1
	EPCH90154	Screw For P.C.B.	2
16	EPCH20510	Screw For P.C.B. (ESD)	2
	EPP11020-4	Insulating Washer (ESD) (Down)	2
17	EPP11020-4	Insulating Washer (ESD) (Up)	2
18	EPCH20102	Screw For Housing	4
19	EPCH30228-2	Screw For Housing	4
20	EPMI30511-8	Pilot Rod	1
21	EPMO91507CE	Motor Assembly	1
22	EPCH20504-11	Screw For Motor	5
23	EPM11339	Gear For EA-BANK9350L(LW)/C6	1
	EPM11340	Gear For EA-BANK9500LW/C6	1
	EPM11341	Gear For EA-BANK9250LH(LHW)/C6	1
24	EPMG30081-2	Pilot Rod	1
25	EPGZ15023R	Clutch Assembly For EA-BANK9350L/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15023R-1	Clutch Assembly For EA-BANK9350L/C6 Hex. 6.35mm-B9.5	1
	EPGZ15023R-2	Clutch Assembly For EA-BANK9350LW/C6	1
	EPGZ15024R	Clutch Assembly For EA-BANK9500LW/C6	1
	EPGZ15027R	Clutch Assembly For EA-BANK9250LH/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15027R-2	Clutch Assembly For EA-BANK9250LH/C6 Hex. 6.35mm-B9.5	1
26	EPMI30511-24	Pilot Rod	1
27	EPGK20232-1	"C"Ring	1
28	EPGI28450	Iron Washer	1
29	EPGH92256	Idle Gear For EA-BANK9350L(LW)/C6	4
	EPGH92259	Idle Gear For EA-BANK9500LW/C6	4
30	EPGG92283	Gear Seat For EA-BANK9350L(LW)/C6	1
31	EPGG92286	Gear Seat For EA-BANK9500LW/C6	1
	EPGG92283-3	Central Gear For EA-BANK9350L(LW)/C6	1
32	EPGG92286-3	Central Gear For EA-BANK9500LW/C6	1
	EPGH92256-1	Idle Gear For EA-BANK9350L(LW)/C6	4
33	EPGH92259-1	Idle Gear For EA-BANK9500LW/C6	4
	EPGH92263	Idle Gear For EA-BANK9250LH(LHW)/C6	4
34	EPGG92283-1	Gear Seat For EA-BANK9350L(LW)/C6	1
	EPGG92286-1	Gear Seat For EA-BANK9500LW/C6	1

No.	Parts No.	Description	Q'ty
34	EPGG92288	Gear Seat For EA-BANK9250LH(LHW)/C6	1
35	EPGG92283-4	Central Gear For EA-BANK9350L(LW)/C6	1
	EPGG92286-4	Central Gear For EA-BANK9500LW/C6	1
	EPGG92288-2	Central Gear For EA-BANK9250LH(LHW)/C6	1
36	EPGG92288-1	Gear Seat Group For EA-BANK9250LH(LHW)/C6	1
	EPGG92283-2	Gear Seat Group For EA-BANK9350L(LW)/C6	1
	EPGG92286-2	Gear Seat Group For EA-BANK9500LW/C6	1
37	EPGA91289	Gear Case For EA-BANK9350L(LW)/C6	1
	EPGA91290	Gear Case For EA-BANK9500LW/C6	1
38	EPGN21251-3	Main Bearing	1
39	EPG21427-5	Plate-Clutch	1
40	EPGP30381-2	Steel Balls (7.14mm)	13
41	EPGC90319	Cam	1
42	EPGU30374	Stop Pilot	1
43	EPGP30381-3	Steel Balls (7mm)	4
44	EPGP30383-3	Cushion	4
45	EPG21109	Shaft Coupler	1
46	EPGP30381-3	Steel Balls (7mm)	2
47	EPGD91421	Shaft For EA-BANK9350L/C6 Hex. 6.35mm (Opt.)	1
	EPGD91421-1	Shaft For EA-BANK9350L/C6 Hex. 6.35mm-B9.5	1
	EPGD91421W	Shaft For EA-BANK9350LW/C6	1
48	EPGD91423W	Shaft For EA-BANK9500LW/C6	1
49	EPGP30351	Steel Balls 4mm Hex. 6.35mm	2
50	EPGF90325-1	Waring Plate	1
	EPGE92419	Waring Spring For EA-BANK9350L(LW)/C6	1
	EPGE92419-3	Waring Spring For EA-BANK9500LW/C6	1
51	EPGE92426	Waring Spring For EA-BANK9250LH(LHW)/C6	1
	EPGY21325	Waring Spring Base For EA-BANK9350L(LW)/C6	1
	EPGY21325-2	Waring Spring Base For EA-BANK9500LW/C6	1
52	EPGN21251-1	Bearing For EA-BANK9350L(LW)/C6	2
	EPGN21251-2	Bearing For EA-BANK9500LW/C6	2
53	EPG20214	Clutch Case For EA-BANK9350L(LW)/C6	1
	EPG20214-1	Clutch Case For EA-BANK9500LW/C6	1
54	EPGL30481-7	Torque Adjusting Pins	4
55	EPGM30499	Torque Adjusting Ring	1
56	EPGJ30476	Bit Sleeve For Hex 6.35mm Type	1
57	EPGO21350	Bit Spring For Hex 6.35mm Type	2
58	EPGQ21366	"C"Ring For Hex 6.35mm Type	1
59	EPCD91040-1	Coupler	1
60	EPCH50671-16	Grounding Means	1
61	EPCH30193-30	Screw	1
62	EPCK28031-2	Trigger Spring	1
63	EPE32201-1	Heat Sink (Down)	1
64	EPE32201-1	Heat Sink (Up)	1
65	EPW50109-6	Clamp	1
66	EPW50104-4	Gasket	2
67	EPCH20209-12	Screw	2
68	EPP10505-1	Wrench	1
69	EPM20107	Gear Coupler	1
70	EPG21312	Washer	1
71	EPPE02003-8	Soft Cover	2

EA-BANK960(990)(9120)(9180)(9250)P/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE ELECTRIC SCREWDRIVER (6PIN)
EA-BANK9120(9180)PH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED ELECTRIC SCREWDRIVER (6PIN)
EA-BANK960(990)(9120)(9180)(9250)PW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE 3/8" ELECTRIC WRENCH (6PIN)
EA-BANK9120(9180)PHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED 3/8" ELECTRIC WRENCH (6PIN)

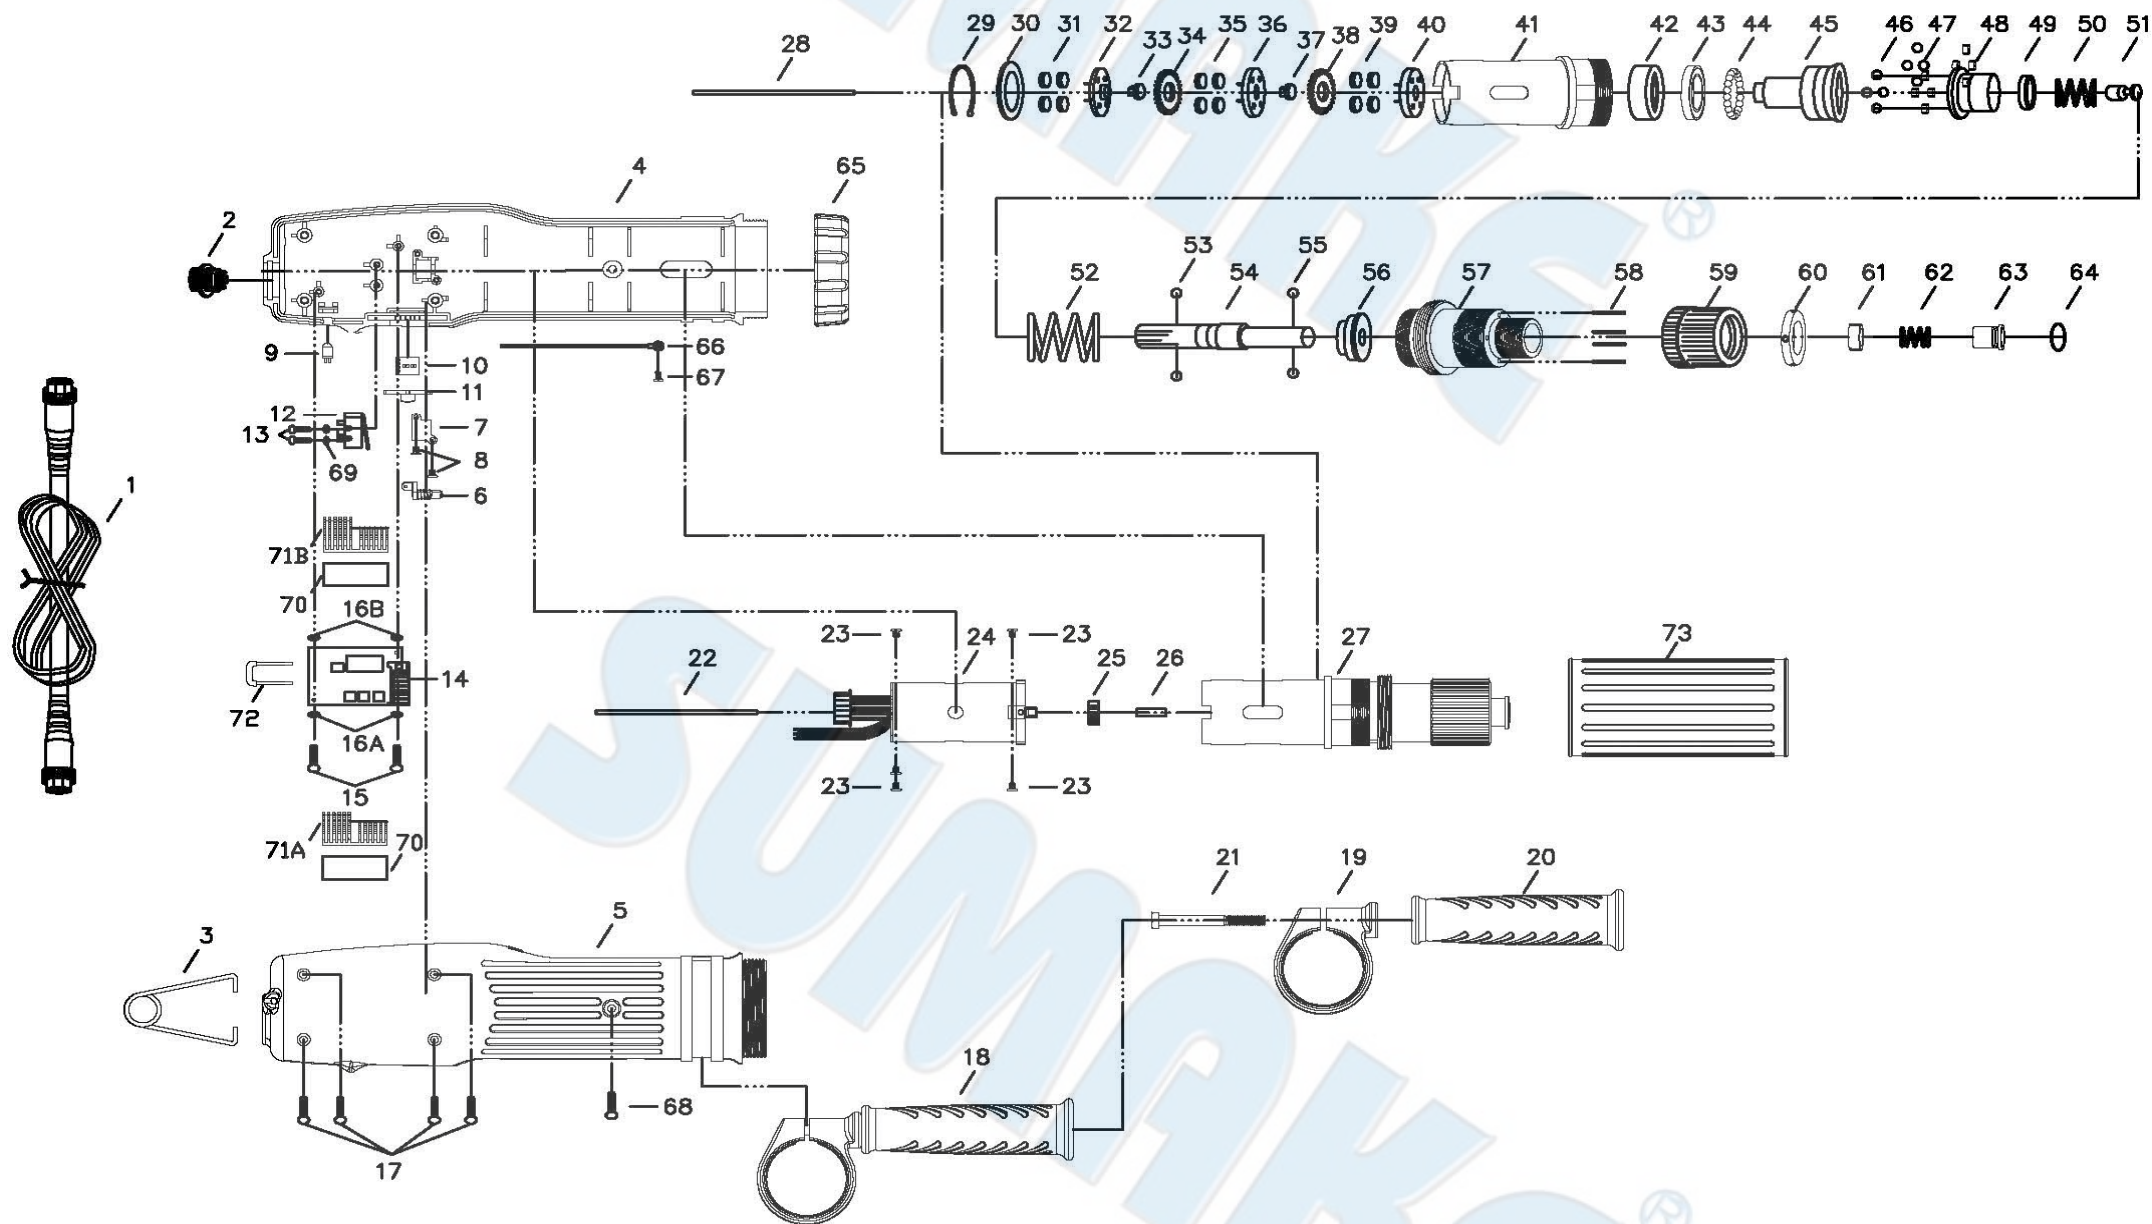

EA-BANK960(990)(9120)(9180)(9250)P/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE ELECTRIC SCREWDRIVER (6PIN)

EA-BANK9120(9180)PH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED ELECTRIC SCREWDRIVER (6PIN)

EA-BANK960(990)(9120)(9180)(9250)PW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE 3/8" ELECTRIC WRENCH (6PIN)


EA-BANK9120(9180)PHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED 3/8" ELECTRIC WRENCH (6PIN)

PARTS LIST

No.	Parts No.	Description	Q'ty
1	EPAA50001-139N	Cord Assembly 3m "I/O Signal Control Box" Type	1
2	EPPZ50190	Connector Assembly	1
3	EPCJ20012-1	Suspension Hook	1
4	EPC40748-13F	Housing-Underside Assembly	1
	EPC40748-14F	Housing-Underside Assembly (ESD)	1
5	EPCA93115	Housing-Upside	1
	EPCA93115-1	Housing-Upside (ESD)	1
6	EPC50152-7	Push Rod	1
7	EPCF80001	Fixture	1
8	EPOCH30200	Screw For Fixture	2
9	EPE33105-1	Led	1
10	EPEG31421-15F	Changeover Switch P.C.B.	1
11	EPCI50212-6	F/R Switching Element For EA-BANK960P(PW)/C6	1
	EPCI50212-7	F/R Switching Element For EA-BANK990P(PW)/C6	1
	EPCI50212-9	F/R Switching Element For EA-BANK9120P(PW)/C6, EA-BANK9120PH(PHW)/C6	1
	EPCI50212-11	F/R Switching Element For EA-BANK9180P(PW)/C6, EA-BANK9180PH(PHW)/C6	1
	EPCI50212-10	F/R Switching Element For EA-BANK9250P(PW)/C6	1
12	EPH10201	Shut Off Switch	1
13	EPCH90151-1	Screw For Shut Off Switch	2
14	EPEG31537-2A-2.0	P.C.B.	1
15	EPCH90154	Screw For P.C.B.	2
	EPCH20510	Screw For P.C.B. (ESD)	2
16A	EPP11020-4	Insulating Washer (Up)	2
16B	EPP11020-4	Insulating Washer (ESD) (Down)	2
17	EPCH20102	Screw For Housing	4
18	EPCF85002	Side Handle Assembly	1
19	EPC15002	Clamp-Side Handle	1
20	EPC15001	Handle-Side Handle	1
21	EPCH30195	Screw	1
22	EPMI30511-8	Pilot Rod	1
23	EPCH20102-31	Screw For Motor	5
24	EPMO91506CE	Motor Assembly	1
25	EPM11321	Gear For EA-BANK960P(PW)/C6	1
	EPM11320	Gear For EA-BANK990P(PW)/C6, EA-BANK9120PH(PHW)/C6	1
	EPM11319	Gear For EA-BANK9120P(PW)/C6, EA-BANK9180PH(PHW)/C6	1
	EPM11318	Gear For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
26	EPMG30081-2	Pilot Rod	1
27	EPGZ15002-5B-2	Clutch Assembly For EA-BANK960P/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15002-5B-3	Clutch Assembly For EA-BANK960P/C6 Hex 6.35mm-B9.5	1
	EPGZ15002-5W-1	Clutch Assembly For EA-BANK960PW/C6	1
	EPGZ15002-6B-2	Clutch Assembly For EA-BANK990P/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15002-6B-3	Clutch Assembly For EA-BANK990P/C6 Hex 6.35mm-B9.5	1
	EPGZ15002-6W-1	Clutch Assembly For EA-BANK990PW/C6	1
	EPGZ15002-7B-2	Clutch Assembly For EA-BANK9120P/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15002-7B-3	Clutch Assembly For EA-BANK9120P/C6 Hex 6.35mm-B9.5	1
	EPGZ15002-7W-1	Clutch Assembly For EA-BANK9120PW/C6	1
	EPGZ15002-8B-2	Clutch Assembly For EA-BANK9180P/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15002-8B-3	Clutch Assembly For EA-BANK9180P/C6 Hex 6.35mm-B9.5	1
	EPGZ15002-8W-1	Clutch Assembly For EA-BANK9180PW/C6	1
	EPGZ15002-10B	Clutch Assembly For EA-BANK9120PH/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15002-10B-1	Clutch Assembly For EA-BANK9120PH/C6 Hex 6.35mm-B9.5	1
	EPGZ15002-10W	Clutch Assembly For EA-BANK9120PHW/C6	1
	EPGZ15002-11B	Clutch Assembly For EA-BANK9180PH/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15002-11B-1	Clutch Assembly For EA-BANK9180PHW/C6 Hex 6.35mm-B9.5	1
	EPGZ15002-11W	Clutch Assembly For EA-BANK9180PHW/C6	1
	EPGZ15020R	Clutch Assembly For EA-BANK9250P/C6 Hex. 6.35mm (Opt.)	1
	EPGZ15020R-1	Clutch Assembly For EA-BANK9250P/C6 Hex 6.35mm-B9.5	1
	EPGZ15020R-2	Clutch Assembly For EA-BANK9250PW/C6	1
28	EPMI30511-7	Pilot Rod	1
29	EPGK20232	"C" Ring	1
30	EPGI28442	Iron Washer	1
31	EPGH92235	Idle Gear For EA-BANK960P(PW)/C6	3
	EPGH92234	Idle Gear For EA-BANK990P(PW)/C6, EA-BANK9120PH(PHW)/C6	4
	EPGH92233	Idle Gear For EA-BANK9120P(PW)/C6, EA-BANK9180PH(PHW)/C6	3

No.	Parts No.	Description	Q'ty
31	EPGH92232	Idle Gear For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	4
32	EPGG21512	Gear Seat For EA-BANK960P(PW)/C6	1
	EPGG21511	Gear Seat For EA-BANK990P(PW)/C6, EA-BANK9120PH(PHW)/C6	1
	EPGG21510	Gear Seat For EA-BANK9120P(PW)/C6, EA-BANK9180PH(PHW)/C6	1
	EPGG21509	Gear Seat For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
33	EPC20109	Central Gear For EA-BANK960P(PW)/C6	1
	EPC20108	Central Gear For EA-BANK990P(PW)/C6, EA-BANK9120PH(PHW)/C6	1
	EPC20107	Central Gear For EA-BANK9120P(PW)/C6, EA-BANK9180PH(PHW)/C6	1
	EPC20111	Central Gear For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
34	EPGI28453	Washer For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
35	EPGH92236	Idle Gear For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	4
36	EPGG21513	Gear Seat For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
37	EPG20110	Central Gear For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
38	EPGI28453	Washer	1
39	EPGH92235-1	Idle Gear For EA-BANK960P(PW)/C6	3
	EPGH92234-1	Idle Gear For EA-BANK990P(PW)/C6, EA-BANK9120PH(PHW)/C6	4
	EPGH92233-1	Idle Gear For EA-BANK9120P(PW)/C6, EA-BANK9180PH(PHW)/C6	3
	EPGH92232-1	Idle Gear For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	4
40	EPGG21512-1	Gear Seat For EA-BANK960P(PW)/C6	1
	EPGG21511-1	Gear Seat For EA-BANK990P(PW)/C6, EA-BANK9120PH(PHW)/C6	1
	EPGG21510-1	Gear Seat For EA-BANK9120P(PW)/C6, EA-BANK9180PH(PHW)/C6	1
	EPGG21509-1	Gear Seat For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
41	EPGA91286	Gear Case For EA-BANK960P(PW)/C6, EA-BANK990P(PW)/C6, EA-BANK9120P(PW)/C6, EA-BANK9120PH(PHW)/C6, EA-BANK9180PH(PHW)/C6	1
	EPGA91285	Gear Case For EA-BANK9180P(PW)/C6, EA-BANK9250P(PW)/C6	1
42	EPGN30433	Main Bearing	1
43	EPG21427-3	Plate-Clutch	1
44	EPGP30351	Steel Balls Φ4	18
45	EPGX90306-2	Cam	1
46	EPGP30381	Steel Balls Φ6	4
47	EPGP30383	Cushion	4
48	EPGF90325	Waring Plate	1
49	EPGV90330	Spring Cap	1
50	EPGO90342	Inner Spring	1
51	EPGU30372	Stop Pilot	1
52	EPGE92390	Waring Spring For EA-BANK960P(PW)/C6	1
	EPGE92391-3	Waring Spring For EA-BANK990P(PW)/C6	1
	EPGE92392-1	Waring Spring For EA-BANK9120P(PW)/C6, EA-BANK9120PH(PHW)/C6	1
	EPGE92393-1	Waring Spring For EA-BANK9180P(PW)/C6, EA-BANK9180PH(PHW)/C6	1
53	EPGE92414-1	Waring Spring For EA-BANK9250P(PW)/C6	1
	EPGP30381	Steel Balls Φ6	2
54	EPGD91406	Shaft For Hex 6.35mm Type	1
	EPGD91406-1	Shaft For Hex 6.35mm-B9.5 Type	1
55	EPGD91407	Shaft For Round-Socket	1
	EPGP30371	Steel Balls Φ3.15	2
56	EPGY21323	Waring Spring Base	1
57	EPGB30445-1	Clutch Case Assembly	1
58	EPGL30483	Torque Adjusting Pins	4
59	EPGM30493	Torque Adjusting Ring	1
60	EPGS30503	"C" Ring	1
61	EPG21305	Spacer For Hex 6.35mm Type	1
62	EPGO21342	Bit Spring For Hex 6.35mm Type	1
63	EPGJ21350	Bit Sleeve For Hex 6.35mm Type	1
64	EPGQ21362	"C" Ring For Hex 6.35mm Type	1
65	EPCD91034	Coupler	1
	EPCD91034-1	Coupler (ESD)	1
66	EPCH50671-6	Grounding Means	1
67	EPCH20102-11	Screw	1
68	EPCH90149	Screw-Rbnk	2
69	EPCH20102-8	Washer	2
70	EPW50104-7	Gasket	2
71A	EPE32204-1	Heat Sink (Up)	1
71B	EPE32204-1	Heat Sink (Down)	1
72	EPW50109-4	Clamp	1
73	EPPE02003-7	Soft Cover	2

EA-BANK9250PH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED ELECTRIC SCREWDRIVER
EA-BANK9250PHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED 3/8" ELECTRIC WRECH
EA-BANK9350P/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE ELECTRIC SCREWDRIVER
EA-BANK9350PW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE 3/8" ELECTRIC WRECH
EA-BANK9500PW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE 1/2" ELECTRIC WRECH

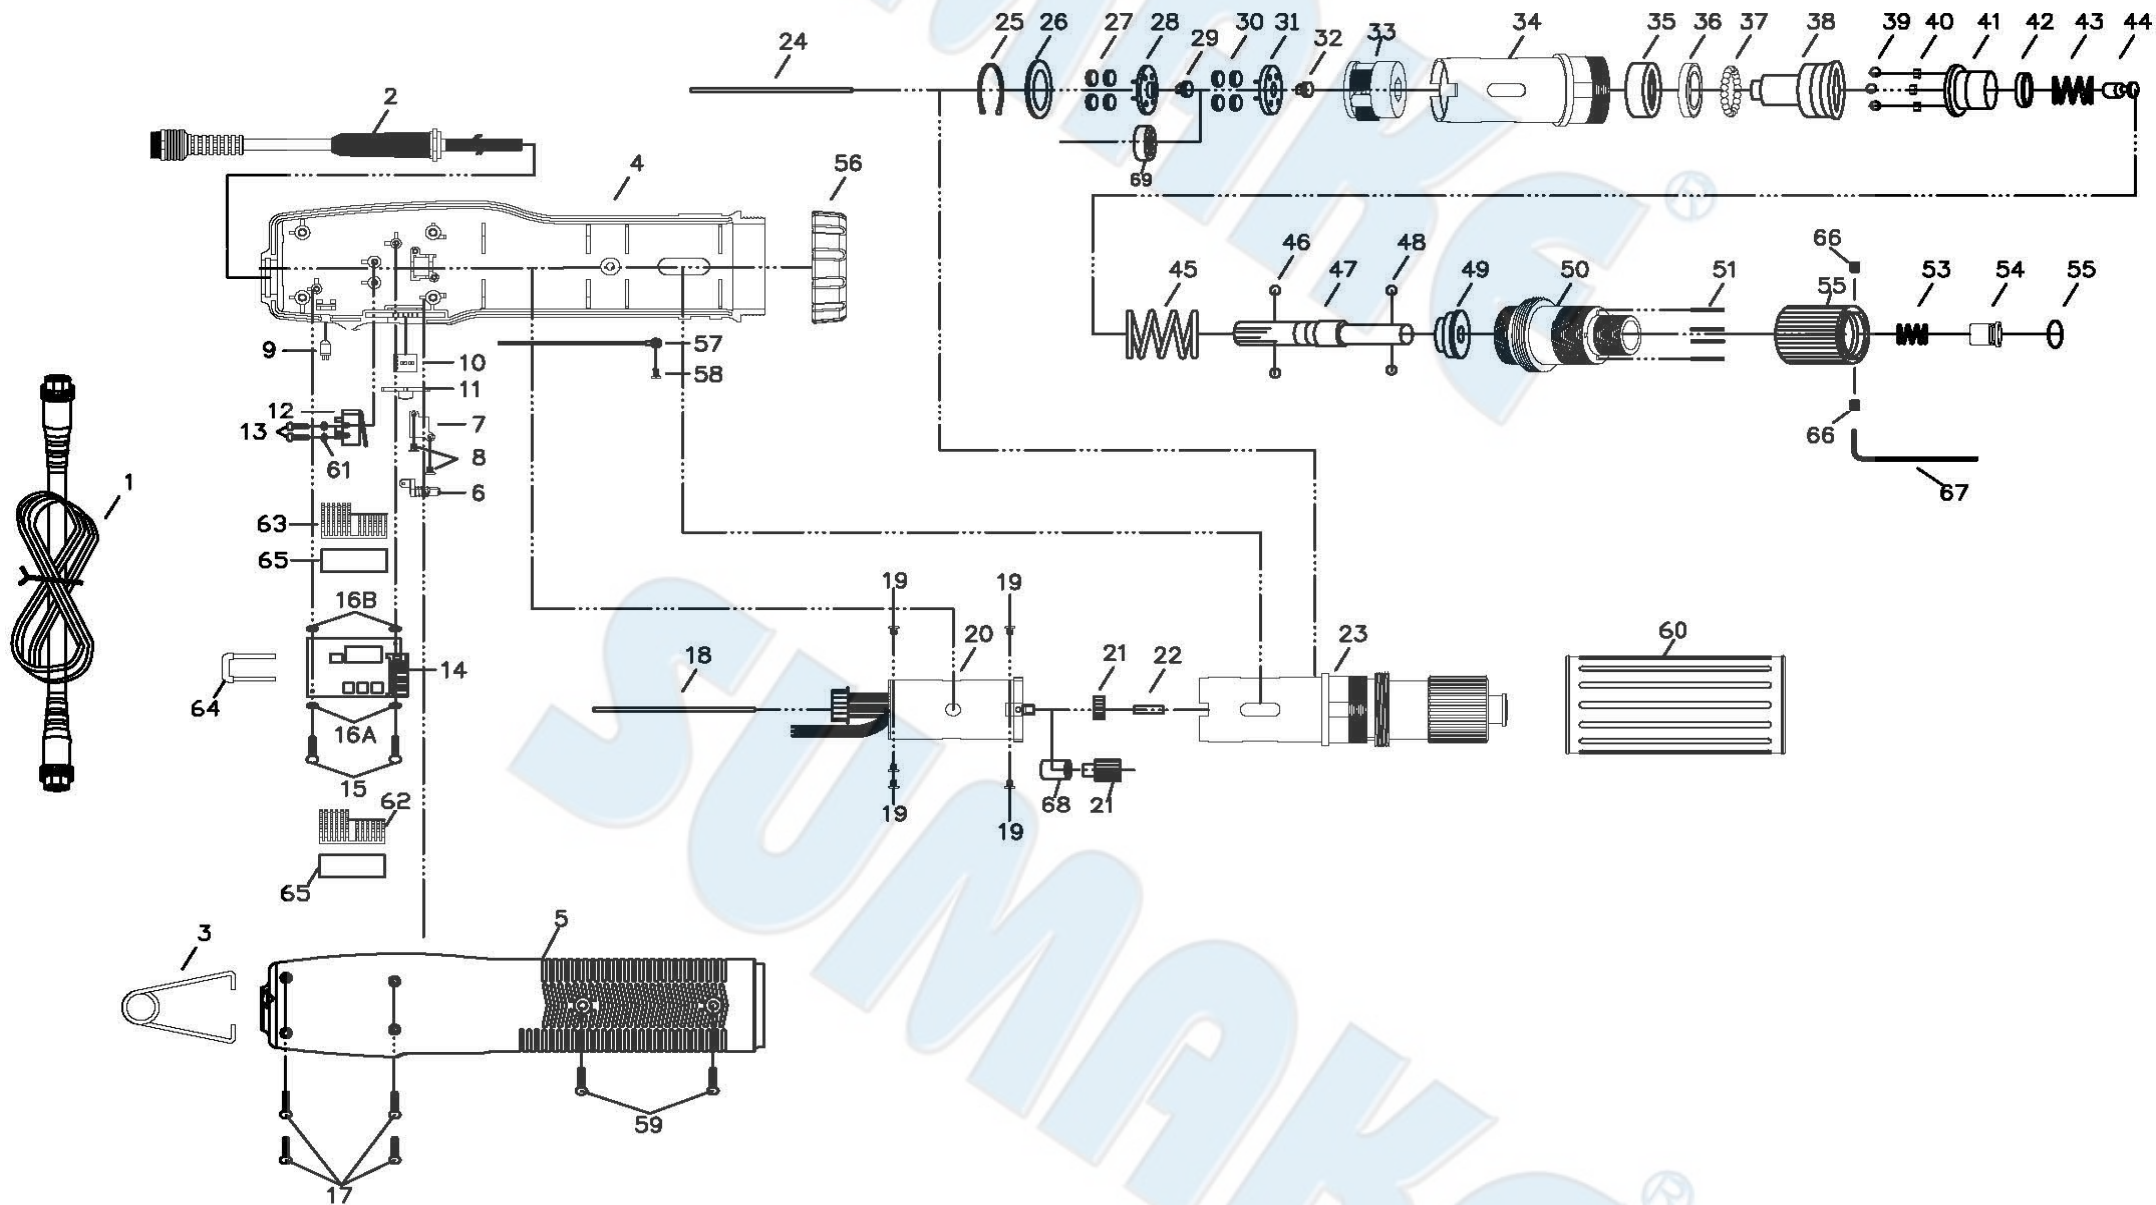

EA-BANK9250PH/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED ELECTRIC SCREWDRIVER

EA-BANK9250PHW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE HIGH SPEED 3/8" ELECTRIC WREMCH

EA-BANK9350P/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE ELECTRIC SCREWDRIVER

EA-BANK9350PW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE 3/8" ELECTRIC WREMCH

EA-BANK9500PW/C6 BRUSHLESS FULL AUTO SHUT-OFF DC40V, PUSH TO START TYPE 1/2" ELECTRIC WREMCH

PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	EPAA50005A-B6P-7N	Cord Assembly 3m "I/O Signal Control Box" Type	1	31	EPGG92288	Gear Seat For EA-BANK9250PH(PHW)/C6	1
2	EPAA50006-B6P-4N-T	Cord Assembly	1	32	EPGG92283-4	Central Gear For EA-BANK9350PH(PHW)/C6	1
3	EPCJ20012-1	Suspension Hook	1		EPGG92286-4	Central Gear For EA-BANK9500PHW/C6	1
4	EPC40805F	Housing-Underside Assembly	1		EPGG92288-2	Central Gear For EA-BANK9250PH(PHW)/C6	1
	EPC40805-1F	Housing-Underside Assembly (ESD)	1	33	EPGG92283-2	Gear Seat Group For EA-BANK9350PH(PHW)/C6	1
5	EPCA93118	Housing-Upside	1		EPGG92286-2	Gear Seat Group For EA-BANK9500PHW/C6	1
	EPCA93118-1	Housing-Upside (ESD)	1		EPGG92288-1	Gear Seat Group For EA-BANK9250PH(PHW)/C6	1
6	EPCE50155	Push Rod	1	34	EPGA91289	Gear Case For EA-BANK9350PH(PHW)/C6	1
7	EPCE80003	Fixture	1		EPGA91290	Gear Case For EA-BANK9500PHW/C6	1
8	EPCH30200	Screw For Fixture	2	35	EPGN21251-3	Main Bearing	1
9	EPE33105-4	Led	1	36	EPG21427-5	Plate-Clutch	1
10	EPEG31421-15F	Changeover Switch P.C.B.	1	37	EPGP30381-2	Steel Balls (7.14mm)	13
11	EPCI50212-10	F/R Switching Element For EA-BANK9350PH(PHW)/C6	1	38	EPGX90312	Cam	1
	EPCI50212-8	F/R Switching Element For EA-BANK9500PHW/C6	1	39	EPGP30381-3	Steel Balls (7mm)	4
12	EPH10201	Shut Off Switch	1	40	EPGP30383-3	Cushion	4
13	EPCH90151-1	Screw For Shut Off Switch	2	41	EPGF90325-2	Waring Plate	1
14	EPEG31537-3A-2.0	P.C.B.	1	42	EPGV90331-2	Spring Cap	1
15	EPCH90154	Screw For P.C.B.	2	43	EPGO90342-2	Inner Spring	1
	EPCH20510	Screw For P.C.B. (ESD)	2	44	EPGU30374	Stop Pilot	1
16A	EPP11020-4	Insulating Washer (Down) (ESD)	2	45	EPGE92419-5	Waring Spring For EA-BANK9350PH(PHW)/C6	1
16B	EPP11020-4	Insulating Washer (Up) (ESD)	2		EPGE92419-1	Waring Spring For EA-BANK9500PHW/C6	1
17	EPCH20102	Screw For Housing	4		EPGE92426	Waring Spring For EA-BANK9250PH(PHW)/C6	1
18	EPMI30511-13	Pilot Rod	1	46	EPGP30381-2	Steel Balls (7.14mm)	2
19	EPCH20504-11	Screw For Motor	5	47	EPGD91426	Shaft For EA-BANK9350PH/C6 Hex. 6.35mm (Opt.)	1
20	EPMO91507CE	Motor Assembly	1		EPGD91426-1	Shaft For EA-BANK9350PH/C6 Hex. 6.35mm-B9.5	1
21	EPM11339	Gear For EA-BANK9350PH(PHW)/C6	1		EPGD91425W	Shaft For EA-BANK9350PHW/C6	1
	EPM11340	Gear For EA-BANK9500PHW/C6	1		EPGD91424W	Shaft For EA-BANK9500PHW/C6	1
	EPM11341	Gear For EA-BANK9250PH(PHW)/C6	1	48	EPGP30351	Steel Balls 4mm For Hex 6.35mm Type	2
22	EPMG30081-2	Pilot Rod	1	49	EPGY21325-1	Waring Spring Base	1
23	EPGZ15026R-1	Clutch Assembly For EA-BANK9350PH/C6 Hex. 6.35mm (Opt.)	1	50	EPGB30451	Clutch Case Assembly	1
	EPGZ15026R-2	Clutch Assembly For EA-BANK9350PH/C6 Hex. 6.35mm-B9.5	1	51	EPGL30481-7	Torque Adjusting Pins	4
	EPGZ15026R	Clutch Assembly For EA-BANK9350PHW/C6	1	52	EPGM30499	Torque Adjusting Ring	1
	EPGZ15025R	Clutch Assembly For EA-BANK9500PHW/C6	1	53	EPGO21350	Bit Spring For Hex 6.35mm Type	1
	EPGZ15028R	Clutch Assembly For EA-BANK9250PHW/C6	1	54	EPGJ30476	Bit Sleeve For Hex 6.35mm Type	1
	EPGZ15028R-1	Clutch Assembly For EA-BANK9250PH/C6 Hex. 6.35mm (Opt.)	1	55	EPGQ21366	"C"Ring For Hex 6.35mm Type	1
	EPGZ15028R-2	Clutch Assembly For EA-BANK9250PH/C6 Hex. 6.35mm-B9.5	1	56	EPCD91040-1	Coupler	1
24	EPMI30511-8	Pilot Rod	1	57	EPCH50671-16	Grounding Means	1
25	EPGK20232-1	"C" Ring	1	58	EPCH30193-30	Screw	1
26	EPGI28450	Iron Washer	1	59	EPCH30228-2	Screw	4
27	EPGH92256	Idle Gear For EA-BANK9350PH(PHW)/C6	3	60	EPPE02003-8	Soft Cover	2
	EPGH92259	Idle Gear For EA-BANK9500PHW/C6	3	61	EPCH20102-8	Washer	2
28	EPGG92283	Gear Seat For EA-BANK9350PH(PHW)/C6	1	62	EPE32201	Heat Sink (Down)	1
	EPGG92286	Gear Seat For EA-BANK9500PHW/C6	1	63	EPE32201	Heat Sink (Up)	1
29	EPGG92283-3	Central Gear For EA-BANK9350PH(PHW)/C6	1	64	EPW50109-6	Clamp	1
	EPGG92286-3	Central Gear For EA-BANK9500PHW/C6	1	65	EPW50104-7	Gasket	2
30	EPGH92256-1	Idle Gear For EA-BANK9350PH(PHW)/C6	3	66	EPCH20209-12	Screw	2
	EPGH92259-1	Idle Gear For EA-BANK9500PHW/C6	3	67	EPP10505-1	Wrench	1
	EPGH92263	Idle Gear For EA-BANK9250PH(PHW)/C6	4	68	EPM20107	Gear Coupler	1
31	EPGG92283-1	Gear Seat For EA-BANK9350PH(PHW)/C6	1	69	EPG21312	Washer	1
	EPGG92286-1	Gear Seat For EA-BANK9500PHW/C6	1				

ELECTRIC SCREWDRIVER OPERATION AND MAINTENANCE MANUAL



MAKE JOBS BETTER THAN EVER

INSTRUCTION

Congratulations on your purchase and welcome to **SUMAKE**.

NOTICE

SUMAKE Screwdrivers are designed for installing threaded fasteners in light industrial and appliance manufacturing applications. **SUMAKE** is not responsible for customer modification of tools for applications on which **SUMAKE** was not consulted.

WARNING

Important safety information enclosed.

Read all these instructions before placing tool in service or operation this tool and save these instructions. It is the responsibility of the employer to place the information in this manual into the hands of the operator. Failure to observe the following warnings could result in injury. When using electric tools, Basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

1. General Safety Rules

WARNING! Read all instructions. Failure to follow all instructions listed below may result in electric shock fire and/or serious injury. The term "Electric Screwdriver" in all of the warning listed below refer to your mains operated Electric Screwdriver.

SAVE THESE INSTRUCTIONS

1. Electrical Safety

- (a) **Keep work area clean and well lit.** Cluttered and dark areas invite accidents.
- (b) Electric Screwdriver plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) Electric Screwdrivers. Unmodified plugs and matching outlets will reduce risk of electric shock.
- (c) **Don't expose Electric Screwdrivers to rain or wet conditions.** Water entering a Electric Screwdriver will increase the risk of electric shock.
- (d) Do not abuse the cord. Never use the cord to carrying, pulling or unplugging the Electric Screwdriver. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

2. Personal Safety

- (a) **Stay alert, watch what you are doing and use common sense when operating a Electric Screwdriver. Do not use Electric Screwdriver while you are tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating Electric Screwdrivers may result in serious personal injury.
- (b) **Avoid accidental starting. Ensure the switch is in the off position before plugging in.** Carrying Electric Screwdrivers with your finger on the switch or plugging in Electric Screwdrivers that have the switch on invites accidents.
- (c) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the Electric Tools in unexpected situations.

3. Electric Screwdriver Use and Care

- (a) **Do not force the Electric Screwdriver. Use the correct Electric Screwdriver for your application.** The correct Electric Screwdriver will do the job better and safer at the rate for which it was designed.
- (b) **Do not use Electric Screwdriver if switch does not turn it on or off.** Any Electric Screwdriver that cannot be controlled with the switch is dangerous and must be repaired.
- (c) **Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the Electric Screwdrivers.** Such preventive safety measures reduce the risk of starting the Electric Screwdriver accidentally.
- (d) **Store idle Electric Screwdrivers out of reach of children and do not allow persons unfamiliar with the Electric Screwdriver or these instructions to operate the Electric Screwdriver.** Electric Screwdrivers are dangerous in the hands of untrained users.

4. Service

- (a) **Have your Electric Screwdriver serviced by qualified repair person using only identical replacement parts,** This will ensure that the safety of the Electric Screwdriver is maintained.

2. Operations Cautions

1. Whenever changing a bit, make certain the Forward / Reverse Switch is in the " OFF " position and tool is unplugged.
2. Do not allow chemicals such as acetone, benzene, thinner, trichloroethylene ketone, or other similar chemicals to come in contact with the screwdriver housing as damage will result.
3. Do not drop or abuse the screwdriver.
4. Do not adjust the torque setting higher than 8 on the torque scale.
5. Operation frequency: The original setting of the frequency is 1 sec on / 3 sec off. The number of screw fastened is about 15 pcs. Over frequently using makes the motor overheated and damage to screwdriver.
Enough heat-dissipation is good for screwdriver.
Slow speed Duty Cycle Conversion (for reference)
Based on 1000 rpm, 1 second ON/3 seconds OFF. For example, the duty cycle for 350rpm,
 $1000-350=650$, $650/1000\%=65\%$
 $ON=1*1.65=1.65$, $OFF=3*1.65=4.95$ (rounded value) =2 seconds ON / 5 seconds OFF
This tool is intended for a duty cycle of 2.0 sec on, 5.0 sec off.

Slow speed (rpm)	operation frequency	Slow speed (rpm)	operation frequency	Slow speed (rpm)	operation frequency
900	1.0 ON 3.0 OFF	600	1.0 ON 3.0 OFF	300	2.0 ON 5.0 OFF
850	1.0 ON 3.0 OFF	550	2.0 ON 5.0 OFF	250	2.0 ON 5.0 OFF
800	1.0 ON 3.0 OFF	500	2.0 ON 5.0 OFF	200	2.0 ON 5.0 OFF
750	1.0 ON 3.0 OFF	450	2.0 ON 5.0 OFF	150	2.0 ON 5.0 OFF
700	1.0 ON 3.0 OFF	400	2.0 ON 5.0 OFF	100	2.0 ON 5.0 OFF
650	1.0 ON 3.0 OFF	350	2.0 ON 5.0 OFF		

6. Do not use this screwdriver for tightening wood screws. This is " Metal Assembly Screw Driver "
7. Do not operate the Forward / Reverse Switch the motor is running.
8. Whenever a tool is not being used, move the Forward / Reverse Switch to the "OFF" position and unplug the screwdriver.
9. Please grasp the plug of power cord while plugging in or out the plugs of connecting cord of Electric Screwdriver and power cord.
10. Please fix the Power Supply to avoid any danger of pulling and dragging the power cord.
11. In case of the Power Supply is overheated or overloaded with maximum current rating of fuse, the high-speed fuse will be melt down and cut off the power. If the Power Supply continues to jump off or has an abnormal switching reaction, please stop the operation immediately and send back the Power Supply for repair.
12. When Electric Screwdriver is running, if slides Forward/Reverse Switch instantly, device will generate the protection program to force Electric Screwdriver stop.

CAUTION

1. Do not drop or abuse the tool.
2. Whenever a tool is not being used, position the Power Switch to the "OFF" position and unplug the power cord.

3. Description of Operation

Attaching / detaching bit and bit type

Push up the holder clamp by finger tip, and it will be unlocked. Thus, the bit can be freely attached and detached (single finger notion type).

1. Insert the power plug into a receptacle and set the change cover switch to "F" position.
2. Apply the bit to the screw head and press the lever or push main body to, then the switch will be turned ON to start the motor running.
3. When the screw is tightened and reach the torque that you had set, The tool will stopped automatically.
4. To reset the tool by releasing the lever to the original position or releasing the bit from the screw head.
5. To return the screw, set the changeover switch to "R" position.



WARNING ! DO NOT OPERATE THIS TOOL WITHOUT PROTECTIVE EARTH CONNECTED

4. Grounding Instructions

The tool should be grounded while in use to protect the operator from electric shock. The tool is equipped with a three-conductor cord and three-prong grounding-type plug to fit the proper grounding-type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal.

Green and yellow ----- Earth, Blue ----- Neutral, Brown ----- Live



5. Installation Instructions

1. Use the Power Supply voltage recommended in the specification of this manual.
2. When using a commercial Power Supply be sure to set up circuit and safety breakers. You must also properly ground the mechanisms.
3. The temperature and humidity should be kept at appropriate levels.
4. Do not set up the Power Supply in a room that has poor ventilation and where it may be exposed to dust and metallic flakes.
5. Do not put heavy object on top of Power Supply or pile thing on it.
6. Attach the Power Supply securely to a flat, stable surface. If the Power Supply is put a high place, take special care to ascertain that there is no danger of it falling.
7. Keep bystanders away. Do not permit unauthorized personnel to operate this Power Supply.
8. Do not set up the Power Supply near high voltage machinery or in an excessively noisy environment.
9. Avoid setting up or storing the Power Supply in wet or oily environments or where it might be exposed to corrosive or flammable gases.
10. We emphasize that the Power Supply should be placed in stable, fixed location.

6. Servicing

Maintenance and Inspection:

1. The screwdriver must be operated in top condition, one day working hour must be not more than eight hours.
2. Periodically check for wear of motor carbon brush, one day for eight hours use is normal, replace it after every five to six months.
3. Please note don't let the motor and Power Supply get over heated, every minute use 10~15 screws to operate.
4. The frequency use of this electric screw driver is over than eight hours a day, still it needs periodically testing and treatment. Every 5-6 months.
5. Inspect tool cords periodically and if damaged, have them repaired by an authorized service facility. Inspect extension cords periodically and replace if damaged.
6. Do not remove any labels. Replace any damaged label.

CAUTION

1. The use of other than genuine **SUMAKE** replacement parts may result in decreased tool performance and increased maintenance, and may invalidate all warranties.
2. All repairs and maintenance of this tool and its word must be performed by an authorized service center.
3. **SUMAKE** is not responsible for customer modification of tools for applications on which **SUMAKE** was not consulted.
4. Repairs should be made only by authorized, trained personnel. Consult your nearest **SUMAKE** authorized service center.
5. It is the responsibility of the employer to place the information in this manual into the hands of the operator.

IMPORTANT

1. Within warranty period, any quality issue please contact with **SUMAKE** distributors and do not take apart screwdrivers without authorization, otherwise warranty will NOT be covered.
2. Any repair and maintenance task has to follow **SUMAKE** directly training education.

SAVE THESE INSTRUCTIONS DO NOT DESTROY



ELECTRIC SCREWDRIVER



CORDLESS SCREWDRIVER