SUMAKE®

Professional & Industrial

OPERATION AND MAINTENANCE MANUAL

ITEM NO.: EAA-AUX, EAA-AUXB
EAA-AUX1, EAA-AUX1A
EAA-AUX1-B, EAA-AUX1A-B
EAA-AUXA-500, EAA-AUX-500
EAA-AUX7
AUXILIARY ARM

EAA-AUX-500
EAA-AUX
EAA-AUX7
EAA-AUX1
EAA-AUX-B

EAA-AUXA-500
EAA-AUXB
EAA-AUX1A
EAA-AUX1A-B

EAA-AUX **AUXILIARY ARM**

EAA-AUXB **AUXILIARY ARM WITH 90° ADAPTER(NO.EAA-AUXB-AD)**

EAA-AUX-500 **AUXILIARY ARM**

EAA-AUXA-500 **AUXILIARY ARM WITH 90° ADAPTER(NO.EAA-AUXA-500-AD)**

EAA-AUX7 **AUXILIARY ARM**

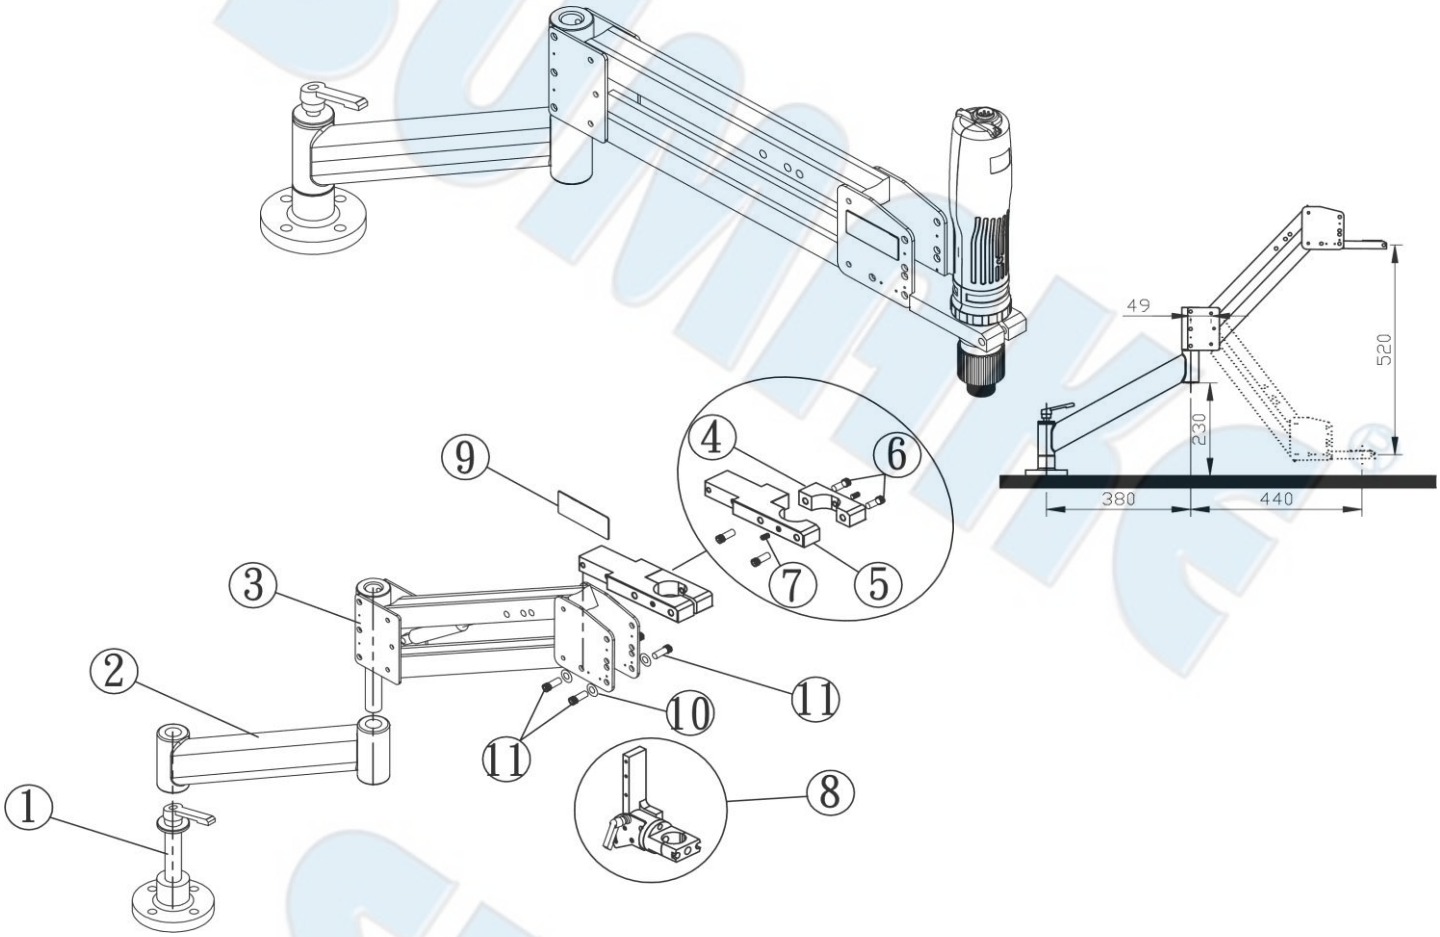

PARTS LIST

No.	Parts No.	Description	Q'ty
1	EPKP20007-1	Pillar Holder	1
2	EPKP20002-1	Extension Pillar	1
3	EPKP20003-3	Limit Rod (25kg)	1
	EPKP20003-4	Limit Rod [EAA-AUX1A-AD] (30kg)	1
4	EPKP20007-5	Clamp Fixed Seat [EA-BAK(BANK)9180L/P]	1
5	EPKP20007-6	Clamp Fixed Block [EA-BAK(BANK)9180L/P]	1
6	EPCH20506-23	Screw (M8x35)	4
7	EPCH20209-11	Screw (M8x10)	2
8	EAA-AUXA-AD	Various Angle [EAA-AUXA-AD]	1
9	EPYTM0103	Lable [EAA-AUXA-AD]	1
10	EPW10203-3	Washer	4
11	EPCH20506-24	Screw (M6x16)	4

EAA-AUX-P-2005A-K2

The procedure for assembling:

1. Use 4 hex screw fix the Pillar Holder(1) to the table.
2. Install the Extension Pillar(2) on Pillar Holder(1).
3. Combine Limit Rod(3) and the Extension Pillar(2).
4. Take off the coupler of screwdriver and use EAA-AUX-500 auxiliary Arm Coupler(5)lock on the screwdriver.
5. Fix the screwdriver on the Clamp(4)then complete the assembly.

EAA-AUX1 **AUXILIARY ARM**

EAA-AUX1A **AUXILIARY ARM WITH 90° ADAPTER(NO.EAA-AUX1A-AD)**

EAA-AUX1-B **AUXILIARY ARM**

EAA-AUX1A-B **AUXILIARY ARM WITH 90° ADAPTER(NO.EAA-AUX1A-AD)**

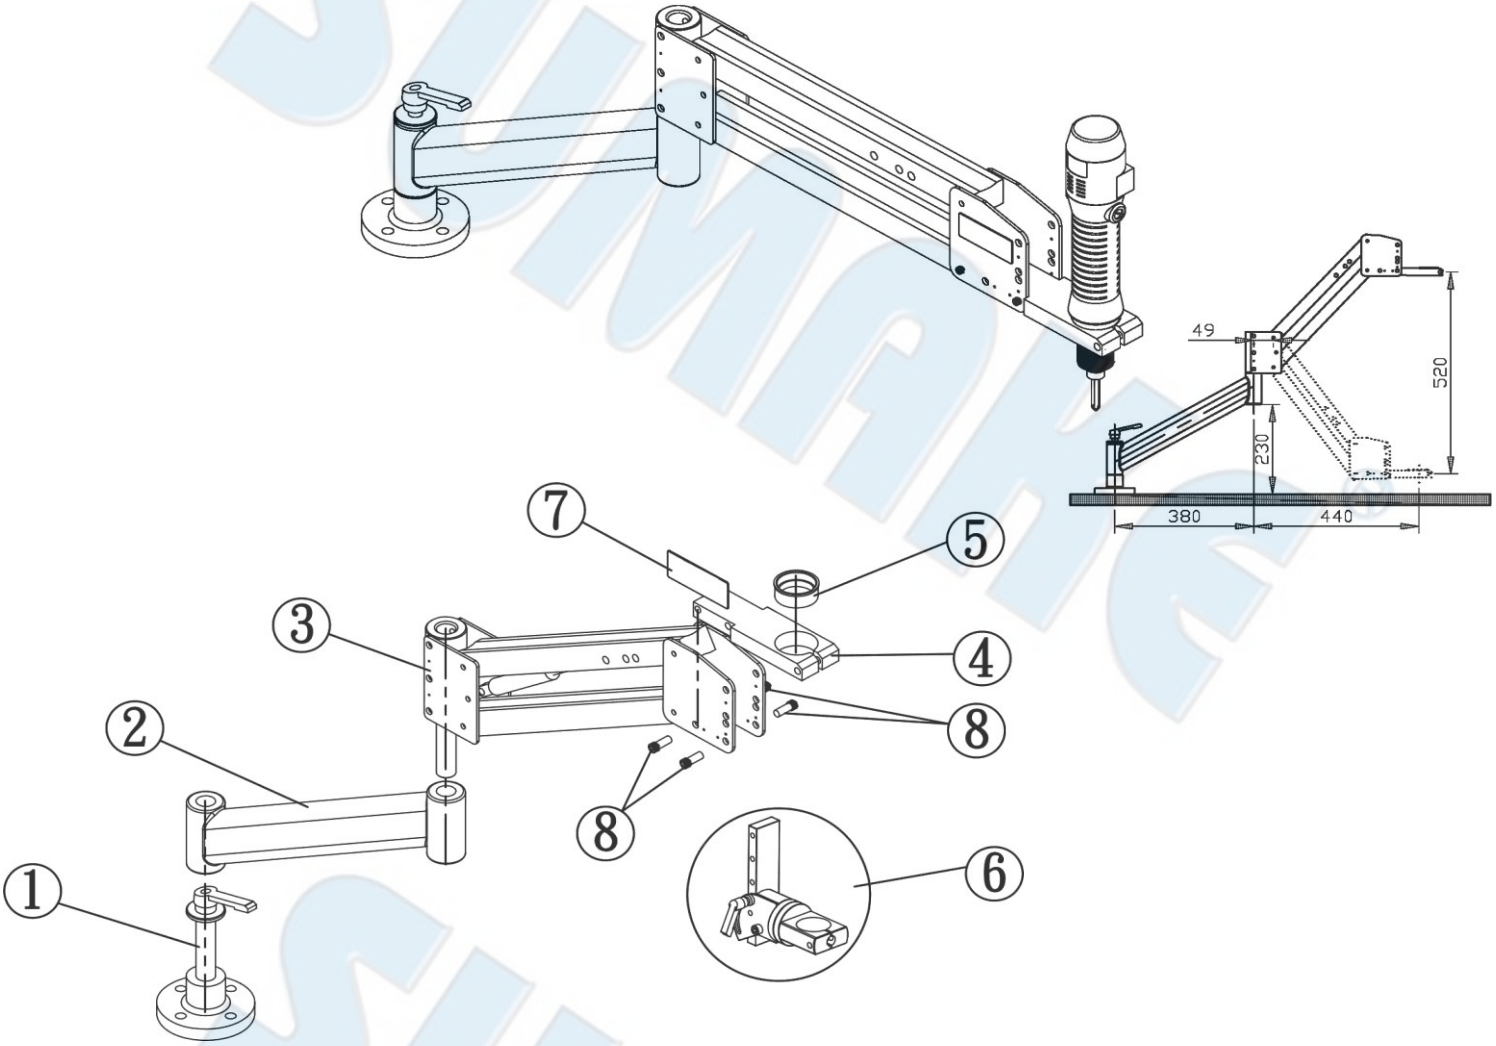

PARTS LIST

No.	Parts No.	Description	Q'ty
1	EPKP20007-1	Pillar Holder	1
2	EPKP20002-1	Extension Pillar	1
3	EPKP20003-1	Limit Rod (20kg)	1
	EPKP20003-2	Limit Rod (25kg)	1
4	EPKP20005-1	Clamp [EA-BAK(BANK)9130L/P]	1
5	EPKP20017	Coupler [EA-BAK(BANK)9130L/P]	1
	EPKP20017-1	Coupler [EA-BN6xxL/P, EA-BD6xxL/P]	1
6	EAA-AUX1A-AD	Various Angle	1
7	EPYTM0102	Lable	1
8	EPKP20019	Screw For	4

EAA-AUX1-P-2310B-K2

The procedure for assembling:

1. Use 4 hex screw fix the Pillar Holder(1) to the table.
2. Install the Extension Pillar(2) on Pillar Holder(1).
3. Combine Limit Rod(3) and the Extension Pillar(2).
4. Take off the coupler of screwdriver and use EAA-AUX1 auxiliary Arm Coupler(5)lock on the screwdriver.
5. Fix the screwdriver on the Clamp(4)then complete the assembly.

SUMAKE

CAUTION

1. Keep work area clean.
2. The use of any part other than genuine SUMAKE replacement parts may invalidate all warranties.
3. Whenever change the screwdriver or brushes, position the Power Switch of the screwdriver to “OFF” and unplug the power cord to keep the danger off..
4. Do not use large electric screwdriver to this small Auxiliary Arm. Do not use this Auxiliary Arm for purpose not intended, like drill.
5. Inspect all joins of this Auxiliary Arm periodically and if damaged or have operation problem, have them repaired by an authorized service facility. Keep it clean and away from greasy dirt.
6. Do not overload weight on the auxiliary arm than its capacity. Failing to do so will result in the auxiliary arm not to return to it’s original position.

Specifications

Model No.	EAA-AUXA-500 EAA-AUX-500	EAA-AUXB EAA-AUX	EAA-AUX7	EAA-AUX1A EAA-AUX1	EAA-AUX1A-B EAA-AUX1-B
Description	Suspension Arm	Suspension Arm	Suspension Arm	Suspension Arm	Suspension Arm
Reach (mm)	50 ~ 830	50 ~ 830	50 ~ 830	50 ~ 830	50 ~ 830
Capacity (kgs)	Max 4	Max 4	Max 4	Max 3	Max 3
Gas Spring (kgs)	35	25	25	20	20
Appliable Model	EA-BAK9250L(P)H EN-BAN9350~ EN-BAN9500	EA-BAK960 ~ EA-BAK9250 EA-BAK9250L(P)H is not included.	EA-BK760~ EA-BK7120	EA-712 ~ EA-745 ED-617 ~ ED-645	EA-BN630 ~ EA-BN650 EA-BD630 ~ EA-BD650