SUMAKE®

Professional & Industrial

OPERATION AND MAINTENANCE MANUAL

ITEM NO.: ES-B11 series

10.8V BRUSHLESS FULL AUTO SHUT-OFF CORDLESS SCREWDRIVER

ES-B11002H(3)(5)(6)-I-2402D-K2

SUMAKE

Specifications

MODEL		ES-B11002H	ES-B11003	ES-B11005	ES-B11006
INPUT VOLTAGE(DC)		DC 10.8V			
TORQUE (N.m)	hard joints	0.5-2	0.8-3	1.5-4.5	2-6
	soft joints 80%↓	0.5-1.6	0.8-2.4	1.5-3.6	2-4.8
Torque accuracy (%)		±3%			
Torque adjustment		Stepless			
Unloaded Speed (min^{-1})±10%	HI	2700	1400	800	650
	LO	1900	1000	550	450
Screw size (mm)	Machine screw	2.3~3.5	2.6~4.0	4.0~5.0	4.0~5.0
Weight (kg)		0.7kg (w/o battery)			
Length (mm)		188.5*156.5 (L＊H，w/o battery)			
Model of Torque Fixing Ring		EAA-TL28A			
Applicable battery		BP1030L			
Applicable charger station		BC10L01			
Applicable Bit type					

* 1N.m=10.2Kgf.cm 1N.m=8.85Lbf.in

Bits Code ~ B: Hex 6.35mm

Accessory ~ Bit no. : No.2 · · · · Bit use in dia 3.0~4.0mm screw

ES-B11002H	with BIT	1# & 2#	1 Pcs. Each.
ES-B11003/ ES-B11005	with BIT	2#	2 Pcs.
ES-B11006	with BIT	3#	2 Pcs.

CAUTION

SAVE THE INSTRUCTIONS

DO NOT DESTROY

Torque Adjustment Operation

To adjust the torque on these screwdrivers. Proceed as follows:

1. Determine the torque output of the tool by checking a tightened fastener with a torque wrench.
2. Increase or decrease the torque by rotating torque Adjusting Ring. Rotating the Ring clockwise to a higher number on the torque Scale increase torque output while rotating the Ring counterclockwise to a lower number decreases the torque output.
3. Check the adjustment with a torque wrench. A number of factors will affect torque output from one job to another. Final torque adjustment should be made at the job through a of series of gradual increase. Always start below the desired torque and work upward.
4. Adjust the bit torque by changing the driving in length of the adjust ring at the end.
5. The relationship between torque scale and bit torque is as shown Ring, in the torque diagram. The figures of torque scale do not indicate bit torque values. However, the clamping torque of screw itself is different form type, size, material of the screw and the material of its mating part. Use it as standard to obtain an appropriate clamping torque.
6. The (Return torque method) in which once-clamped screw is returned with torque wrench or the like is available as one of torque control methods, however, note that the measured values by the return torque method generally appear in 10%~30% lower than they actually clamping torque.
7. The torque checker measures the torque of screwdriver. The clamping torque of screw itself is different from the clamped conditions. Understand the correlation between clamping torque values and the torque checker values perform the torque control properly.

Torque Curve

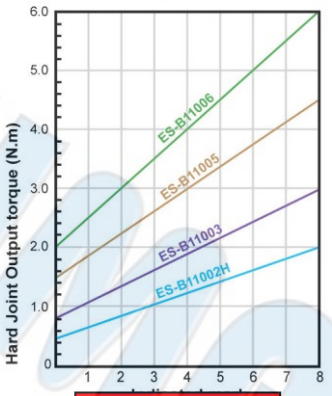

CAUTION

1. In reverse rotation, the clutch is turned off when a screw is tightened at large torque, set same or higher torque to unscrew.
2. The number from zero to eight on the Torque Scale are reference number only and not an indication of actual torque output.

Before you use the Cordless Screwdriver for the first time, it is essential to read and understand the manual completely (including the spare parts view). The term "Cordless Screwdriver" in all of the warning listed below refers to your main operated appliance.

Icon Instructions

1. Read instruction manual.
2. Observe caution and safety notes.
3. Recyclable.
4. For indoor use only.
5. Do not expose to wet or rain conditions.
6. Do not operate in an explosive atmosphere.
7. Do not disassemble.
8. Forbid to throw away.
9. CE certification.

Accessories

Item	Quantity	Unit
Manual	1	PCS
Waist hook	1	PCS
Driver hook	1	PCS
Screw M3*0.5P*8L	1	PCS
Bit	2	PCS
Guarantee Card	1	PCS

Warning ⚠

Read all instructions and make sure the appearance of the device has no damage before you use it. Failure to follow all instructions listed below may result in electric shock fire and/or serious injury.

1. Keep the working area nice and clean.
   1.1 Mess and dark areas may cause of accidents.
   1.2 Keep the device away from rain or moisture to decrease the risk of electric shock or short-circuiting occurred.
2. Be alert to workplace safety.
   2.1 Use the device under a well it and clean environment.
   2.2 Keep children and other people away unless the person has been assigned for the task to avoid the danger of injury.
   2.3 Do not play around while the tool is being used to avoid the danger of distractions.
   2.4 Do not work with the device in potentially explosive environments in which there are inflammable liquids, gases or dusts. Electrical power tools create sparks, which can ignite dusts or fumes.
   2.5 Do not use the device if you are tired or under the influence of drugs, alcohol or medication.
3. When the devices are not being used, store them in a safe place.
4. Use a suitable device for the job will be safer at work and have a better result.
5. Always use a screwdriver that is intended for the task you are undertaking. Do not overload or use it improperly such as drilling or tapping.
6. Dress properly. Do not wear loose clothing or jewels while operating the tool to avoid the danger of trapping.
7. By using the device correctly, make sure to hold it firmly with two hands in place before starting the trigger.
8. When using the electrical power tool, take into account the auxiliary handle or waist hook is advantage of working conditions. On the contrary, the purposes of the waist hook is convenient to put the device away and easier to keep it out of reach of children.
9. Look after either the device or the battery carefully and have any damaged parts repaired by an authorized or qualified shop. Always keep the tool nice and clean; pay attention on the machine grease which might ruin the tool.
10. Disconnect the plug from the power source after the charger has been used.
11. Take apart the battery from the device when it is not being used.
12. Use only the accessories that are detailed in the operating instructions. The use of others which are not recommended in the operating instructions may affect the functioning of the device. It could lead to an increased risk of personal injury as well.
13. Remain alert at all times and watch what you are doing during proceeding. Before operation, always check every part is in good condition and move freely in order to function properly.
14. This device only applies for metal screw bits designated with their dimensions and their shape. Do not recommend to countersink or force of loading on any material such as plastic and wooden.
15. The device does not apply for elastic or tensile load with washer on.
16. To prevent parts in gearbox from damage, replace the grease at least once for every year.
17. It is necessary for the operators to read and follow up all the operating instructions in this manual. SUMAKE is not responsible for any personal injury that might cause of disobeying the safety advice.
18. Use a safety device. Wear protective earmuffs to reduce personal injury.

Cordless Tool Protections

- Over electric current protection
- Thermal Protector
- Slow rotation protection
- Battery Identification
- Prevent from low power
- Stall protection
- Reverse control protection
- Sleep & power saving mode

Warning ⚠

Do not attempt to repair or disassemble this cordless screwdriver, the warranty will be considered void.

1. To maintain the tool, make sure to remove the battery pack before maintaining or repairing the device by a qualified technician.
2. Do not attempt to disassemble or reassemble the device it may result in poor performance or danger of injury; the warranty applies only to initial package.
3. Do not repair the device with other than genuine SUMAKE replacement parts may result in poor performance or danger of injury, the warranty will be considered void.
4. temperature between 0° C ~ 35° C would be an ideal condition of carrying out the tasks on the device.

Operating Instructions

1. Charge the battery in the charging station before first use to make sure operates at its highest capacity. To ensure operators against injuries, release the Forward/Reverse lever as arrow showing below into a center position to have trigger locked before start or disassemble the device.

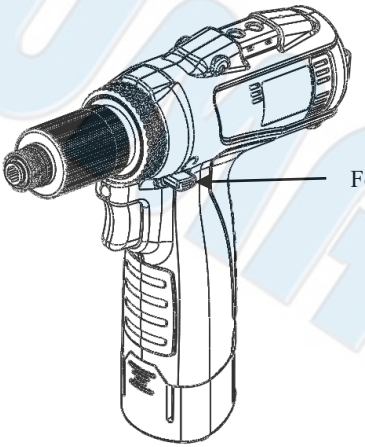

2. Follow below steps to correctly install & remove battery.

Insert Battery Steps	Remove Battery Steps
(1) Take screwdriver and battery. 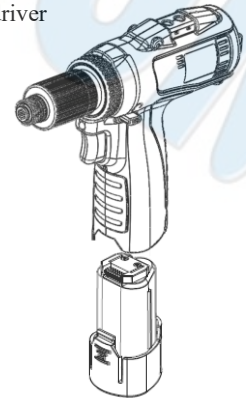	(1) Press the release button and take it out of the Device. 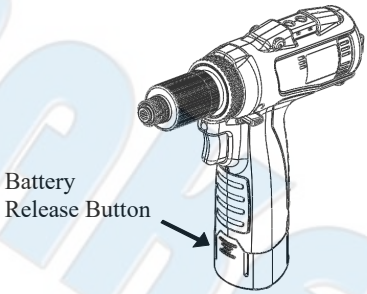
(2) Insert the rechargeable battery into the device follow by the arrow as showing. 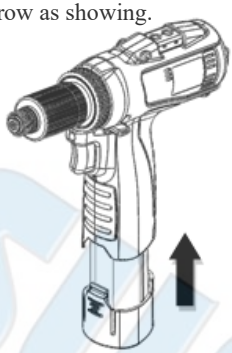	(2) Follow the arrow direction. 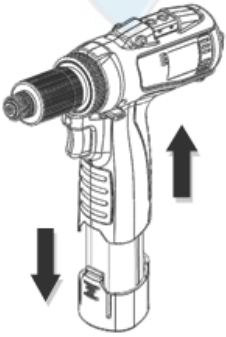
(3) Assembled completely. 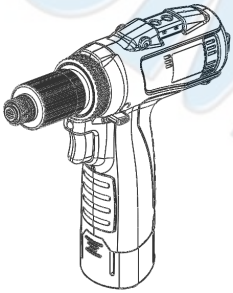	(3) Removed completely. 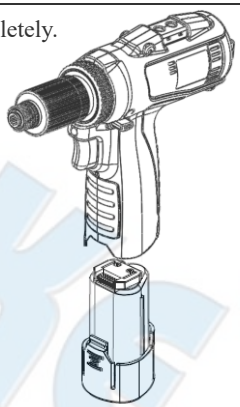

Function / Operating Introduction

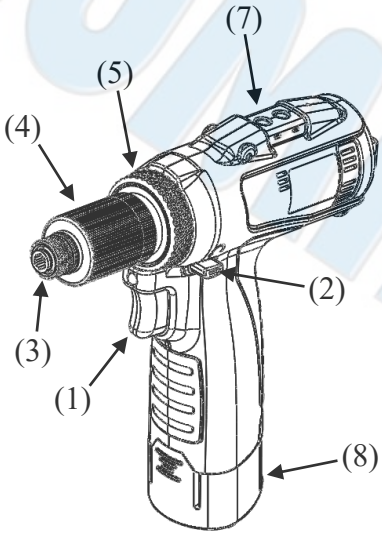

Function Name Table

No.	Description	No.	Description
(1)	Trigger Switch	(6)	S Waist Hook
(2)	Forward/Reverse Lever	(7)	OK/NG/Power/Hi & Lo Indicating Light
(3)	Bit Sleeve	(8)	battery
(4)	Torque Fixing Ring	(9)	Driver Hook
(5)	Torque Fixing Ring/Coupler		

Manual / Function

1. **Full Auto Shut-Off Screwdriver**

It stops automatically when the screw has been tightened up and reached the set-up torque level. The device will not cause damage of task since no continue running after screws are tightened.

(1) Trigger Switch

The LED lights are on when the trigger switch has been pressed about one-third down, and then the screwdriver starts functioning when the switch trigger has been pressed half way down; on the contrary, it stops when the screw has been tightened up or the trigger has been released.

(2) Forward / Reverse Switch

2-1 When the switch turn to the right as arrow indicates, the screwdriver will be clock-wise Screwing to tighten things up; Vice versa, left switch means to release the screw. As the diagram showing, always set the switch to neutral position when the screwdriver is not being used.

Reverse (unscrew)

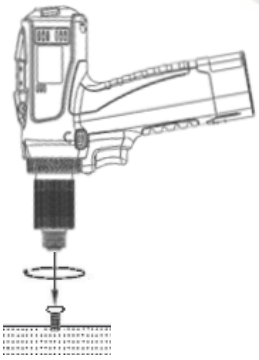

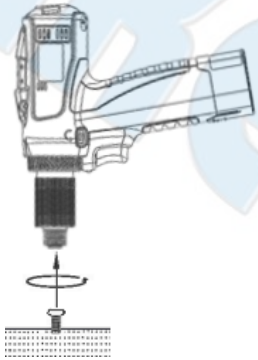

Forward (screw) **Reverse (unscrew)**

2-2 Hi/Lo: to change the speed of rechargeable screwdriver, push Forward/Reverse lever to the middle position, release the switch for about 0.5 second and press trigger switch for 5 seconds, then there will be a short beep sound to adjust the position.

1) It represents Hi position when the power/Hi& Lo indicating light is off.
2) It represents Lo position when the power/Hi& Lo blue indicating light is lit constantly.

2-3 Hi/Lo Switch: When the rotating speed needs to be changed, set up the switch to Hi for the fastest rotation, and setup the switch to Lo for slowest rotation. It's possible that the uncompleted shut off occurs when the switch is setup to Lo and the presetting torque is more than 50% of torque range. Please refer to the following table.

Lo Switch Shut-off	ES-B11002H	ES-B11003	ES-B11005	ES-B11006
OK	1(N.m)↓	1.5(N.m)↓	2.25(N.m)↓	3(N.m)↓
NG	1(N.m)↑	1.5(N.m)↑	2.25(N.m)↑	3(N.m)↑

(3) Bit Sleeve

To Switch the bit and compatibility, pull the head of the type B screwdriver, and install the bit according to the diagram below, and push it in following the arrow indicated on the diagram.

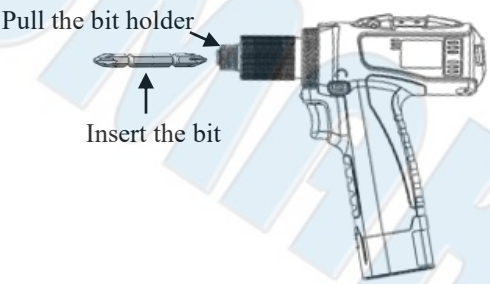

(4) Torque Adjustment Ring:

Turn torque adjust ring counter clock wise to increase torque output, on the other hand decrease torque output by turning torque adjust ring clock wise. 0 printed on the torque adjust ring indicates the minimum torque for setting and 8 for the maximum torque setting. Do not turn torque adjust ring lower than 0 or higher than 8 to avoid torque adjust ring getting stuck with clutch.

(5) Torque Fixing Ring/Coupler

5-1 Torque Fixing Ring: To prevent torque to be adjusted, fixed upside-underside housing and clutch.

5-2 Coupler: Fixed upside-underside housing and clutch.

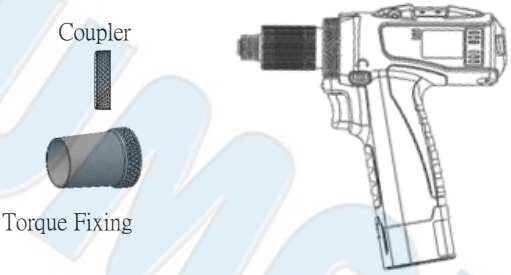

(6) S Waist Hook

The waist hook allows users to carry the device easily by attaching it to their work belt.

(7) OK/NG/Power/Hi& Lo Indicating Light Explanation

Protection Explanation: The indicating LEDS will show Hi/Lo when push Forward/Reverse lever to the middle position. Speed can't be adjusted when temperature protection is activated. Please wait until temperature protection is deactivated.

Signal Indicator Sound Judgment		Start		Release switch to stop running		Screw reaches set torque		Screw NG		Current Protection	
		Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo
Signal Indicator	Running	No lights	No lights	red	red	green	green	red	red	red	red
	Stop	No lights	blue	No lights	blue	No lights	blue	No lights	blue	No lights	blue
Beep Sound		No		1 short		NO		3 short		6 short	

7-1 **Low Battery Protection**: When it reaches a low battery, the red indicating light flashes and beep sounds continuously until the battery is no power and screwdriver is stops working, the indicating light flashes ON/OFF and beep sounds 2 short 1 long. It won't detect the battery power when the motor and PCB temperature protection are activated.

CAUTION!!

Low battery indicator on: When low battery protected indicator on, screwdriver cannot reach to its maximum torque setting. Please change battery pack or charge it.

7-2 **Temperature Protection**: The red indicating light flashes and beep sounds 9 times.

7-3 **Sleep & Power Saving Mode**: It will enter sleep mode when the screwdriver stopped for about 5 seconds, press the lever can wake up sleep. The power will be cut off when sleep more than 24 seconds, press the switch can restore power.

(8) Battery

(9) Driver Hook

It is convenient for the production lines efficiently to have spring balancers to work together with the tools to be more.

Other Cautions

1. The best condition of using the tool is under 8 hours a day, do not over loaded. cording to operating frequency and torque loaded; we suggest adding lubricating oils in clutch per 3-6 months, and kindly contact with distributor when product's maintenance.
2. Do not attempt to repair or disassemble this cordless screwdriver without authorization. Always have the device serviced by assigned factory or qualified person in order to have the warranty effective continually.
3. SUMAKE is not responsible for any poor performance or damage caused by customers own modification of the tool.
4. It is necessary for the management to have every operator to read and follow all instructions in this manual. Do not attempt to repair or disassemble this cordless screwdriver themselves.
5. Chemicals, Acetone, Benzene, Alcohol, Thinner, Ketone, trichloroethylene, etc shall not be in contact with the surface of the screwdriver in order to prevent chemical damage.
6. Please follow instruction carefully and do not drop or shock the screwdriver.
7. This is an external torque adjustment screwdriver, 0 on the torque adjust ring stands for minimum torque and 8 for maximum torque. The rated operation time is 1 second / 3seconds (ON / OFF). Appropriate fastening frequency is 15 fasteners in each minute. Overrunning may damage motor due to overheat. Proper amount of screwdriver resting is recommended to prevent motor overheating.
   Slow speed Duty Cycle Conversion (for reference)
   Based on 1000 rpm, 1 second ON/3 seconds OFF. For example, the duty cycle for 350rpm,1000-350=650，650/1000%=65%
   ON= 1*1.65= 1.65，OFF =3*1.65 =4.95 (rounded value) =2 seconds ON / 5 seconds OFF
   This tool is intended for a duty cycle of 2.0 sec on, 5.0 sec off.

Slow speed (rpm)	operation frequency	Slow speed (rpm)	operation frequency	Slow speed (rpm)	operation frequency	Slow speed (rpm)	operation frequency
900	1.0 ON 3.0 OFF	650	1.0 ON 3.0 OFF	450	2.0 ON 5.0 OFF	250	2.0 ON 5.0 OFF
850	1.0 ON 3.0 OFF	600	1.0 ON 3.0 OFF	400	2.0 ON 5.0 OFF	200	2.0 ON 5.0 OFF
800	1.0 ON 3.0 OFF	550	2.0 ON 5.0 OFF	350	2.0 ON 5.0 OFF	150	2.0 ON 5.0 OFF
750	1.0 ON 3.0 OFF	500	2.0 ON 5.0 OFF	300	2.0 ON 5.0 OFF	100	2.0 ON 5.0 OFF
700	1.0 ON 3.0 OFF						

8. Not allow to turn the Hi/Lo switch during operation in order to cause system malt-function.
9. The device will not be able to function again once the OK/NG indicator/signal is not turn off yet.
10. When adjusting the torque, for safety purpose should stop the screwdriver completely and set the switch to neutral position. It could prevent the user from turning the tool on accidentally.
11. During operation, the switch has been changed accidentally that the device will enable its self-protecting mode which is power off. Re-start the tool when this happens.
12. Each operational torque setting, using time and frequency may result in different level of wear and tear, at higher torque setting and use extensively could accelerate the wearing down of tool. After one month, the torque is getting reduce gradually at the rate of 2~3% or 3~5 %(max torque). The longer use of the device, torque reduction will become stable, and the users could measure the torque by a tester on a regular time schedule to check if the torque power still meets the criteria.
13. The torque range of ES-B11002H/03/05/06 must be measured by the SUMAKE torque meter TM-150A
14. SUMAKE cordless screwdriver torque output is generated by clutch mechanism, and it is applicable to ISO 6789.

Our company reserves the right to modify the product without prior notice.

EU Declaration of Conformity (DOC)

We: **SUMAKE INDUSTRIAL CO., LTD.**

4F, No. 351, Yangguang St., Neihu District, Taipei City, Taiwan

declare in sole responsibility that the equipment

Equipment： **BRUSHLESS FULL AUTO SHUT-OFF CORDLESS SCREWDRIVER**

Model/ Serial No.： **ES-B11002H, ES-B11003, ES-B11005, ES-B11006**

The object of the declaration described above is in conformity with the relevant union harmonization legislation:

- **Machinery Directive 2006/42/EC**
- **Electromagnetic Compatibility 2014/30/EU**
- **RoHS 2011/65/EU**

The following harmonised standards and technical specifications have been applied:

- **EN 62841-2-2:2014+AC2015 to be used in conjunction with EN 62841-1:2015**
- **EN IEC 55014-1:2021**
- **EN IEC 55014-2:2021**
- **AS/NZS CISPR 14.1:2021**

Data:

Noise level:	Sound pressure level: Load: 68.6 dB(A)
	Sound power level: Load: 79.6 dB(A)
Vibration level:	No Load: 0.34 m/s²

Name and Signature/Position

Mike Su – Managing Director

Date and Place

2024/2/5

Taipei, Taiwan

ES-B11002H(3)(5)(6) FULL AUTO SHUT-OFF CORDLESS SCREWDRIVER

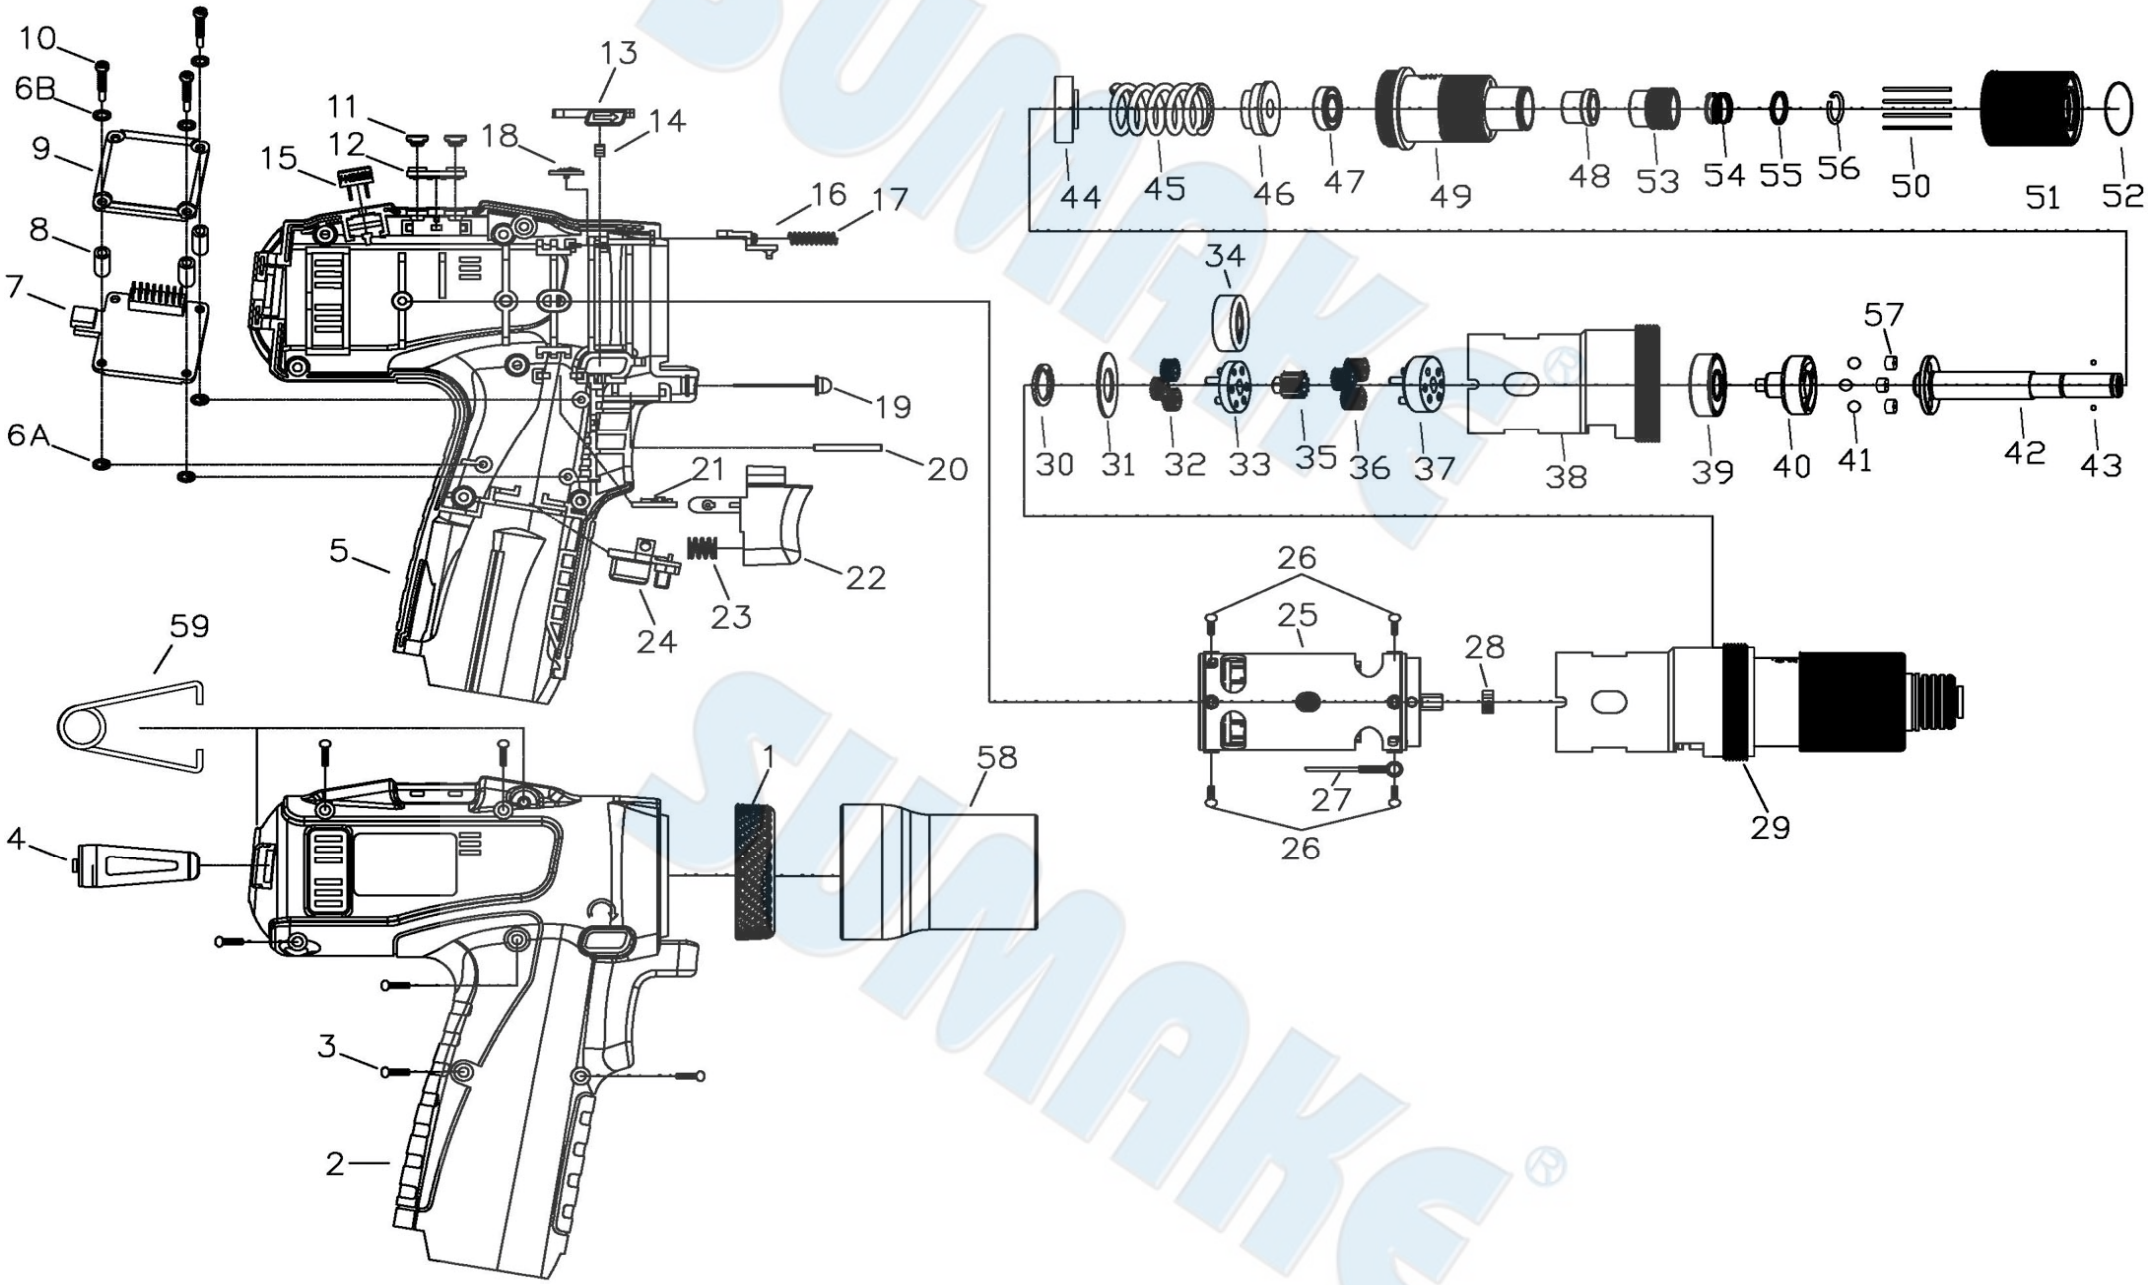

SUNMAKE®

ES-B11002H(3)(5)(6) FULL AUTO SHUT-OFF CORDLESS SCREWDRIVER

PARTS LIST

No.	Parts No.	Description	Q'ty
1	EPCD91041	Coupler	1
2	EPCAB00017-3	Housing-Upside (ESD)	1
3	EPCH20527	Screw	6
4	EPCJ20014-2	Waist Hook	1
5	EPCBB00017-3	Housing-Underside (ESD)	1
6A	EPP11020-7	Insulating Washer (ESD)	3
7	EPEG31555-2	P.C.B.	1
8	EPW50119-1	PC Board Gap Column	3
9	EPEG31555B-2	P.C.B. For ES-B11002H	1
	EPEG31555B-3	P.C.B. For ES-B11003	1
	EPEG31555B-4	P.C.B. For ES-B11005	1
	EPEG31555B-5	P.C.B. For ES-B11006	1
6B	EPP11020-7	Insulating Washer (ESD)	3
10	EPCH90141-1	Screw	3
11	EPC50220-1	LED Light Cover (Limpid)	2
12	EPEG31438-7	Indication light P.C.B.	1
13	EPCI50218-17	Forward/Reverse Lever For ES-B11002H	1
	EPCI50218-10	Forward/Reverse Lever For ES-B11003	1
	EPCI50218-18	Forward/Reverse Lever For ES-B11005	1
	EPCI50218-11	Forward/Reverse Lever For ES-B11006	1
14	EPE63231	Forward/Reverse Spring	
15	EPE33304-5	Buzzer	1
16	EPCI50217-5	Brake Lever	1
17	EPC40407-1	Spring	1
18	EPEG31420-16AF	Brake P.C.B.	1
19	EPN15019-4	LED Light	1
20	EPGL21371-2	PIN	1
21	EPEG31455A-2F	F/R Switching Element P.C.B.	1
22	EPCC70017-1B	Trigger Assembly (ESD)	1
23	EPCK28033-1	Trigger Spring	1
24	EPEG31504-20	Power Module	1
25	EPMO00026-2CE	Motor Assembly For ES-B11002H	1
	EPMO00026CE	Motor Assembly For ES-B11003	1
	EPMO00026-1CE	Motor Assembly For ES-B11005	1
	EPMO00026-3CE	Motor Assembly For ES-B11006	1
26	EPCH20504-11	Motor Screw	8
27	EPE30180-1	Resistance NTC	1
28	EPM11317-1	Drive Pinion For ES-B11003	1
29	EPGZPTA2003-3FA	Gear Housing For ES-B11002H Hex. 5mm (Opt.)	1
	EPGZPTA2003-3FB	Gear Housing For ES-B11002H Hex. 6.35mm (Opt.)	1
	EPGZPTA2003-4FB	Gear Housing For ES-B11002H Hex. 6.35mm-B9.5	1
	EPGZPTA3003-4A	Gear Housing For ES-B11003 Hex. 5mm (Opt.)	1
	EPGZPTA3003-4B	Gear Housing For ES-B11003 Hex. 6.35mm (Opt.)	1
	EPGZPTA3003-5B	Gear Housing For ES-B11003 Hex. 6.35mm-B9.5	1
	EPGZPTA4502-3A	Gear Housing For ES-B11005 Hex. 5mm (Opt.)	1
	EPGZPTA4502-3B	Gear Housing For ES-B11005 Hex. 6.35mm (Opt.)	1
	EPGZPTA4502-4B	Gear Housing For ES-B11005 Hex. 6.35mm-B9.5	1
	EPGZPTA6002-3B	Gear Housing For ES-B11006 Hex. 6.35mm (Opt.)	1
	EPGZPTA6002-4B	Gear Housing For ES-B11006 Hex. 6.35mm-B9.5	1
30	EPGK21181	"C" Ring	1
31	EPGI21191	Iron Washer	1
32	EPGH21221-2	Planet Gear For ES-B11003	3
	EPGH92260	Planet Gear For ES-B11005	3

No.	Parts No.	Description	Q'ty
33	EPGG21231	Gear Seat For ES-B11003	1
	EPGG92287	Gear Seat For ES-B11005	1
34	EPG21311	Washer (High Speed) For ES-B11002H	1
35	EPG20104-1	Central Gear For ES-B11003	1
	EPG20122	Central Gear For ES-B11005	1
	EPG20122-2	Central Gear For ES-B11006	1
36	EPGH92239	Planet Gear For ES-B11002H	3
	EPGH21221-2	Planet Gear For ES-B11003	3
	EPGH92260-1	Planet Gear For ES-B11005	3
	EPGH92260-3	Planet Gear For ES-B11006	3
37	EPGG21515	Gear Seat For ES-B11002H	1
	EPGG21516	Gear Seat For ES-B11003	1
	EPGG92287-1	Gear Seat For ES-B11005	1
	EPGG92289-1	Gear Seat For ES-B11006	1
38	EPGA81104	Gear Case For ES-B11002H, ES-B11003	1
	EPGA81104-1	Gear Case For ES-B11005	1
	EPGA81104-2	Gear Case For ES-B11006	1
39	EPGN21251	Bearing For ES-B11003	1
	EPGN21251-4	Bearing For ES-B11002H, ES-B11005	1
40	EPGC90308-1	Cam For ES-B11002H, ES-B11003	1
	EPGC90308-2	Cam For ES-B11005, ES-B11006	1
41	EPGP30361	Steel Balls 5mm	3
42	EPGD91419A	Shaft ES-B11002H, ES-B11003, ES-B11005 For Hex. 5mm Type (Opt.)	1
	EPGD91419	Shaft ES-B11002H, ES-B11003, ES-B11005 For Hex. 6.35mm Type (Opt.)	1
	EPGD91430	Shaft ES-B11006For Hex. 6.35mm Type (Opt.)	1
	EPGD91419-1	Shaft ES-B11002H, ES-B11003, ES-B11005 For Hex. 6.35mm-B9.5 Type	1
	EPGD91430-1	Shaft ES-B11006 For Hex. 6.35mm-B9.5 Type	1
43	EPGP21291A	Steel Balls For Hex. 5mm Type (Opt.)	2
	EPGP21291B	Steel Balls For Hex. 6.35mm Type	2
44	EPGF90328	Waring Plate For ES-B11002H, ES-B11003, ES-B11005	1
	EPGF90333	Waring Plate For ES-B11006	1
45	EPGE90361-3	Waring Spring For ES-B11002H	1
	EPGE92423	Waring Spring For ES-B11003	1
	EPGE92422	Waring Spring For ES-B11005	1
	EPGE92425-3	Waring Spring For ES-B11006	1
46	EPGY21321	Waring Spring Base For ES-B11002H, ES-B11003, ES-B11005	1
	EPGY21326	Waring Spring Base For ES-B11006	1
47	EPGN30434	Bearing	1
48	EPG21305-5	Washer For ES-B11002H, ES-B11003, ES-B11005	1
	EPG21303-2	Washer For ES-B11006	1
49	EPG20213	Clutch Case For ES-B11002H, ES-B11003, ES-B11005	1
	EPG20220	Clutch Case For ES-B11006	1
50	EPGL21371	Torque Adjust Pin	4
51	EPGM21381-6	Torque Adjust Ring For ES-B11002H, ES-B11003, ES-B11005	1
	EPGM21381-5	Torque Adjust Ring For ES-B11006	1
52	EPGS21391	"C" Ring	1
53	EPGJ21352	Bit Sleeve	1
54	EPGO21346	Bit Spring	1
55	EPG21435	Washer	1
56	EPGQ21361	"C" Ring	1
57	EPGP30383-7	Cushion	3
58	EAA-TL28A	Torque Fixing Ring (Alu.)	1
59	EPCJ20012	Suspension Hook	1

NOTE

SUMAKE®
SUMAKE®